

INSTALLATION & CONFIGURATION MANUAL

HXT150

DUAL 3GB/S, HD AND SD INPUT,
FRAME SYNCHRONIZER,
UP/DOWN/CROSS CONVERTER,
EMBEDDER AND DE-EMBEDDER



SYNAPSE //

EVS

Copyright

EVS Broadcast Equipment S.A. – Copyright © 2001 – 2021. All rights reserved.

Disclaimer

The information in this manual is furnished for informational use only and subject to change without notice. While every effort has been made to ensure that the information contained in this user manual is accurate, up-to-date and reliable, EVS Broadcast Equipment cannot be held responsible for inaccuracies or errors that may appear in this publication.

Improvement Requests

Your comments will help us improve the quality of the user documentation. Do not hesitate to send improvement requests, or report any error or inaccuracy on this user manual by e-mail to doc@evs.com.

Regional Contacts

The address and phone number of the EVS headquarters are usually mentioned in the **Help > About** menu in the user interface.

You will find the full list of addresses and phone numbers of local offices either at the end of this user manual (for manuals on hardware products) or on the EVS website on the following page: <http://www.evs.com/contacts>.

User Manuals on EVS Website

The latest version of Media Infrastructure manuals are available at: <https://mi-sftp.evs.com/>
The user manuals for other EVS products can be found at the EVS download center, on the following webpage: <https://www.evs.com/en/download-area>.



**WARNING: TO REDUCE THE RISK OF FIRE OR
ELECTRICAL SHOCK, DO NOT EXPOSE THIS
APPLIANCE TO RAIN OR MOISTURE**

- ALWAYS disconnect your entire system from the AC mains before cleaning any component. The product frame (SFR18 or SFR04) must be terminated with three-conductor AC mains power cord that includes an earth ground connection. To prevent shock hazard, all three connections must always be used.
- NEVER use flammable or combustible chemicals for cleaning components.
- NEVER operate this product if any cover is removed.
- NEVER wet the inside of this product with any liquid.
- NEVER pour or spill liquids directly onto this unit.
- NEVER block airflow through ventilation slots.
- NEVER bypass any fuse.
- NEVER replace any fuse with a value or type other than those specified.
- NEVER attempt to repair this product. If a problem occurs, contact your local EVS distributor.
- NEVER expose this product to extremely high or low temperatures.
- NEVER operate this product in an explosive atmosphere.

Warranty: EVS warrants their products according to the warranty policy as described in the general terms. That means that EVS Broadcast Equipment SA can only warrant the products as long as the serial numbers are not removed.

Copyright © 2001 – 2021 EVS Broadcast Equipment SA

Date created: 19-10-2016

Date last revised: 19-10-2016

EVS, the EVS logo and Synapse are trademarks of EVS Broadcast Equipment SA

This product complies with the requirements of the product family standards for audio, video, audio-visual entertainment lighting control apparatus for professional use as mentioned below.



EN60950	Safety
EN55103-1: 1996	Emission
EN55103-2: 1996	Immunity

EVS Broadcast Equipment
HXT150

FCC Tested To Comply
With FCC
Standards
FOR HOME OR
OFFICE USE

This device complies with part 15 of the FCC Rules
Operation is subject to the following two conditions:
(1) This device may cause harmful interference, and
(2) This device must accept any interference received, including
interference that may cause undesired operation.

Introduction to Synapse	6
An Introduction to Synapse	6
Local Control Panel	6
Remote Control Capabilities	6
Unpacking and Placement	7
Unpacking	7
Placing the card	7
A Quick Start	8
When Powering-up	8
Changing settings and parameters	8
Front Panel Control	8
Example of changing parameters using front panel control	9
EVS Cortex Software	10
Menu Structure Example	10
The HXT150 Card	11
Introduction	11
Features	11
Conversion capabilities	12
Applications	12
Block schematic	13
Important notice	13
Settings Menu	14
Introduction	14
IO-Ctrl	14
IO_Prst_Act	14
IO_Prst_Edit	14
#Inp_Sel	14
#Out-FrmtA	15
#F-delayA	15
#V-delayA	15
#H-delayA	15
#Out-FrmtB	15
#F-delayB	16
#V-delayB	16
#H-delayA	16
#LowPassFiltA	16
#LowPassFiltB	17
#OP47-Demb_Ln	17
Delay-Status	18
Lock-Mode	18
Ref-Type	18
PrstEditView	18
PatternSpeed	18
SD-AR-Det	18
NoWSS/VI_prstA	18
NoWSS/VI_prstB	19
Input_Loss_A	19
ATC_TYPE_SEL	19
TC_Detect	19
Up_CtrlA	19
Up_Prst_actA	19
UP_Prst_editA	19
#Up_Arca	20
#Up_H-scaleA	20
#Up_V-scaleA	20
#Up_H-EnhA	20
#Up_ColorConvA	20
Up_CtrlB	21
Up_Prst_actB	21
UP_Prst_editB	21
#Up_ArcB	21
#Up_H-scaleB	21
#Up_V-scaleB	21
#Up_H-EnhB	21
#Up_ColorConvB	21

Dn_CtrlA	22
Dn_Prst_actA	22
Dn_Prst_editA	22
#Dn_ArcA	22
#Dn_H-scaleA	23
#Dn_V-scaleA	23
#Dn_H-EnhA	23
#Dn_ColorConvA	23
Dn_CtrlB	23
Dn_Prst_actB	23
Dn_Prst_editB	23
#Dn_ArcB	23
#Dn_H-scaleB	24
#Dn_V-scaleB	24
#Dn_H-EnhB	24
#Dn_ColorConvB	24
Cr_CtrlA	24
Cr_Prst_actA	24
Cr_Prst_editA	24
#Cr_ArcA	25
#Cr_H-scaleA	25
#Cr_V-scaleA	25
#Cr_H-EnhA	25
Cr_CtrlB	26
Cr_Prst_actB	26
Cr_Prst_editB	26
#Cr_ArcB	26
#Cr_H-scaleB	26
#Cr_V-scaleB	26
#Cr_H-EnhB	26
Tr_CtrlA	27
Tr_Prst_ActA	27
Tr_Prst_EditA	27
#Tr_ArcA	27
#Tr_H-scaleA	27
#Tr_V-scaleA	27
#Tr_H-EnhA	28
Tr_CtrlB	28
Tr_Prst_ActB	28
Tr_Prst_EditB	28
#Tr_ArcB	28
#Tr_H-scaleB	28
#Tr_V-scaleB	28
#Tr_H-EnhB	28
S2010EmbA-Mode	29
S2010EmbA-Line	29
S2010EmbB-Mode	29
S2010EmbB-Line	29
WST_Ln_Ctrl	29
WST_Ln_F1_A	29
WST_Ln_F2_A	30
WST_Ln_F1_B	30
WST_Ln_F2_B	30
Timecode-ins	30
VITC_Ln_In	30
VITC_Ln_Ctrl	30
VITC_Ln_625	30
VITC_Ln_525	30
VITC_Ln_Dup	30
Ins_CtrlA	31
Ins_Prst_ActA	31
Ins_Prst_EditA	31
#VI-InsertA	31
#VI-DataA	31
#WSS-InsertA	31
#WSS-StndA	31
#WSS-ExtndA	31
S2016-Line	32
#S2016-InsertA	32
#S2016-AspectA	32
#S2016-DataA	32

#OP47-SDP-Emb_A	32
#CC_Ena_A	32
Ins_CtrlB	32
Ins_Prst_ActB	32
Ins_Prst_EditB	32
#VI-InsertB	32
#VI-DataB	33
#WSS-InsertB	33
#WSS-StndB	33
#WSS-ExtndB	33
#S2016-InsertB	33
#S2016-AspectB	33
#S2016-DataB	33
#OP47-SDP-Emb_B	33
#CC_Ena_B	33
GainA	34
R-GainA	34
G-GainA	34
B-GainA	34
GainB	34
R-GainB	34
G-GainB	34
B-GainB	34
BlackA	34
R-BlackA	34
G-BlackA	34
B-BlackA	35
BlackB	35
R-BlackB	35
G-BlackB	35
B-BlackB	35
Audio-Phase	35
Audio_Ctrl	35
Audio_Prst_act	36
Audio_Prst_Edit	36
#Direct-Audio	36
#EmbA_Grp	36
#EmbB_Grp	36
#EmbC_Grp	36
#EmbD_Grp	37
GPI-Ctrl	37
GPI_1 ~ GPI_5	37
IP_Conf0	37
mIPO	37
mNM0	37
mGW0	38
NetwPrefix0	38
Status Menu	39
Introduction	39
Active	39
sInp1	39
sInp1_VI	39
sInp1_WSS-Stnd	40
sInp1_WSS-Extnd	40
sInp1_S2016	41
sInp1_CRC_EDH	41
SDI1S2010Stat	41
SDI1S2010lineSt	41
sInp2	41
sInp2_VI	41
sInp2_WSS-Stnd	41
sInp2_WSS-Extnd	41
sInp2_S2016	41
sInp2_CRC_EDH	42
IODelayA	42
IODelayB	42
FunctionA	42
FunctionB	42

Ref	42
GPI	42
GPIA	42
GPIB	42
GPIC	42
OP47-Det-A	42
OP47-Det-B	42
WST-Det-A	42
WST-Det-B	42
CC_Det_A	43
CC_Det_B	43
IP_Addr0	43
MAC0	43
IPO	43
NMO	43
GW0	43
Events Menu	44
Introduction	44
What is the Goal of an event?	44
Events	44
Announcements	44
Input_A	44
Input_B	44
Ref-Status	44
What information is available in an event?	44
The Message String	45
The Tag	45
Defining Tags	45
The Priority	45
The Address	45
LED Indication	46
Error LED	46
Input_A LED	46
Input_B LED	46
ANC Data LED	46
Reference LED	46
Data Error LED	46
Connection LED	46
Error LED	46
Block Schematic	47
Connector Panels	48
GPI pinning	48
Appendix 1	49
GPI's explained	49
GPI pools	49
binary mode or priority mode	49
Example 1	49
Example 2	50
Example 3	51
Appendix 2	52
Quad speed ADD-ON bus	52
Scope	52
Features	52
Example	53
Multiplexing	54
GNU Public License version 2	56

1 Introduction to Synapse

An Introduction to Synapse

Synapse is a modular system designed for the broadcast industry. High density, intuitive operation and high quality processing are key features of this system. Synapse offers a full range of converters and processing modules. Please visit the EVS Broadcast Equipment SA Website at <http://www.evs.com> to obtain the latest information on our new products and updates.

Local Control Panel

The local control panel gives access to all adjustable parameters and provides status information for any of the cards in the Synapse frame, including the Synapse rack controller. The local control panel is also used to back-up and restore card settings. Please refer to the RRC, ERC, RRS or ERS manuals for a detailed description of the local control panel, the way to set-up remote control over IP and for frame related settings and status information.

Remote Control Capabilities

The remote control options are explained in the rack controller (RRC, RRS, ERC or ERS) manual. The method of connecting to a computer using Ethernet is also described in these manuals.



CHECK-OUT: “EVS CORTEX” SOFTWARE WILL INCREASE SYSTEM FLEXIBILITY OF ONE OR MORE SYNAPSE FRAMES

Although not required to use Cortex with a Synapse frame, you are strongly advised to use a remote personal computer or laptop PC with EVS Cortex installed, as this increases the ease of use and understanding of the modules.

2 Unpacking and Placement

Unpacking

The EVS Synapse card must be unpacked in an anti-static environment. Care must be taken NOT to touch components on the card – always handle the card carefully by the edges. The card must be stored and shipped in anti-static packaging. Ensuring that these precautions are followed will prevent premature failure from components mounted on the board.

Placing the card

The Synapse card can be placed vertically in an SFR18 frame or horizontally in an SFR04 and SFR08 frame. Locate the two guide slots to be used, slide in the mounted circuit board, and push it firmly to locate the connectors.

Correct insertion of card is essential as a card that is not located properly may show valid indicators, but does not function correctly.

NOTE: On power up all LED's will light for a few seconds, this is the time it takes to initialise the card.

NOTE: Please check appendix 1 before connecting any backpanel!

3 A Quick Start

When Powering-up


On powering up the Synapse frame, the card set will use basic data and default initialisation settings. All LED's will light during this process. After initialisation, several LED's will remain lit – the exact number and configuration is dependant upon the number of inputs connected and the status of the inputs.

Changing settings and parameters

The front panel controls or the Synapse Cortex can be used to change settings. An overview of the settings can be found in chapter 5, 6 and 7 of this manual.

Front Panel Control

Front Panel Display and Cursor

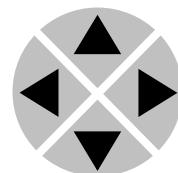

Settings are displayed and changed as follows;

Use the cursor 'arrows' on the front panel to select the menu and parameter to be displayed and/or changed.


- Press ► To go forward through the menu structure.
- Press ◀ To go back through the menu structure.
- Press ▲ To move up within a menu or increase the value of a parameter.
- Press ▼ To move down through a menu or decrease the value of a parameter.

NOTE: Whilst editing a setting, pressing ► twice will reset the value to its default.

Example of changing parameters using front panel control

With the display as shown below


RRC18 [Select Card]
>S01=SFS10

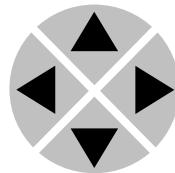

Pressing the ► selects the SFS10 in frame slot 01.

The display changes to indicate that the SFS10 has been selected. In this example the Settings menu item is indicated.

SFS10 [Select Menu]
>Settings

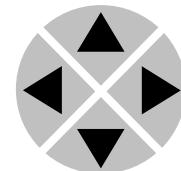


Pressing the ► selects the menu item shown, in this example Settings.

(Pressing ▲ or ▼ will change to a different menu eg Status, Events).

The display changes to indicate that the SFS10 Settings menu item SDI-Format has been selected and shows that its current setting is Auto.

SFS10 [Settings]
>SDI-Format=Auto

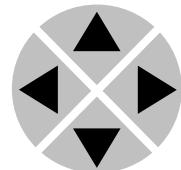


Pressing the ► selects the settings item shown, in this example SDI-Format.

(Pressing ▲ or ▼ will change to a different setting, eg Mode, H-Delay).

The display changes to indicate that the SFS10 Edit Setting menu item SDI-Format has been selected.

SFS10 Edit Setting]
SDI-Format>Auto

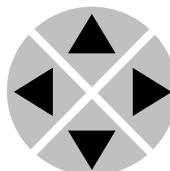

To edit the setting of the menu item press ▲ or ▼.

All menu items can be monitored and/or changed in this way. Changing a setting has an immediate effect.

EVS Cortex Software

EVS Cortex can be used to change the settings of Synapse modules from a PC, either locally or remotely. The software enables communication based on TCP/IP between the Setup PC and Synapse frames/modules.

Each Synapse frame is addressed through its rack controller's unique IP address, giving access to each module, its menus and adjustment items. EVS Cortex has access to data contained within the Synapse module and displays it on a GUI. The software has an intuitive structure following that of the module that it is controlling.

For operation of EVS Cortex, please refer to the Cortex help files.

Menu Structure Example

Slot	Module	Item	Parameter	Setting
▲				
▲				
S02		Identity		
▲				
S01	SFS10	► Set-t ings	► Standard_dig	► Auto
▼				
S00	RRC18	Status	Mode	625
		▼	▼	▼
		Events	Ref-Input	525
			▼	
			H-Delay	
			▼	

NOTE: Further information about Front Panel Control and Synapse Cortex can be obtained from the RRC and RRS operational manuals and the Cortex help files.

4 The HXT150 Card


Introduction	The HXT150 dual output up/down/cross converter is a transmission tool optimized to have a second channel running on a medium long offset delay that will improve statistical multiplexing efficiency. One application is that the SD output in both anamorphic and letterbox formats run on the same multiplexer and because of the SD 5 seconds offset delay will help with multiplexing
Features	<ul style="list-style-type: none"> ▪ HD, SD SDI input (auto selecting) ▪ Low latency conversion process <ul style="list-style-type: none"> ▪ HD outputs ▪ SD outputs (simultaneous anamorphic widescreen and pan-scan) ▪ Up-conversion from SD, 720p or 1080i (equal frame-rate) ▪ Down conversion ▪ Cross conversion 720p to 1080i and vice versa ▪ Dual input backup function <ul style="list-style-type: none"> ▪ Automatic by input carrier detection ▪ Manual by direct control (ACP) ▪ GPI ▪ 2 Frame synchronizers for the HD and SD domain with individual output timing control, One with an additional offset delay. ▪ Color correction in HD and SD domain (RGB and total gain, RGB and total black) ▪ H+V sharpness control in SD domain for crisp down converted picture quality ▪ 4 GPI inputs for ARC and Shuffle triggers ▪ Transparent for 16 channels of embedded audio both HD and SD path ▪ Quad speed audio bus <u>OUT</u> compatible ▪ De-embedding to Synapse bus with transparent input to output handling ▪ Video proc-amp (Y and C control) ▪ Hue control ▪ Compatible with: <ul style="list-style-type: none"> ▪ 270 Mbit/s (SMPTE 259M) 50 and 59.94Hz ▪ 1485 Mbit/s (SMPTE 292M) 50 and 59.94Hz ▪ AFD insertion in HD domain ▪ AFD, WSS, WSS-ext and VI insertion in SD domain ▪ I/O Delay measurement for both output domain ▪ Reporting of chosen input ▪ CRC status information for both inputs ▪ Locks to Bi-level, Tri-level syncs and SDI input ▪ OP47 to WST cross conversion and vice versa ▪ Timecode cross conversion ▪ CC-608 to CC-708 conversion and vice versa ▪ 6 Line Vertical Ancillary Blanking transparency in transparent mode ▪ Full control and status monitoring through the front panel of the SFR04/SFR08/SFR18 frame and the Ethernet port (ACP) ▪ 16 channel embedder in both HD and SD domain ▪ Optional 2 fiber inputs (replacing 2 SDI inputs) or 2 fiber outputs (replacing 2 SDI outputs) on I/O panel

Conversion capabilities

CONVERSION		Output						
		1080i59.94	1080i50	720p59.94	720p50	720p23.98	480i59.94(525)	576i50(625)
SDI Input	1080i59.94	x		x		x	x	
	1080i50		x		x			x
	720p59.94	x		x			x	
	720p50		x		x			x
	720p23.98	x		x		x	x	
	480i59.94(525)	x		x		x	x	
	576i50(625)		x		x			x

Applications

- OB van output card with 16 channel embedding (in combination with 2 x DIO48)
- 2x1 HD protection switch with SD monitoring output
- Dual domain (HD & SD) production down converter with individual timing adjustment

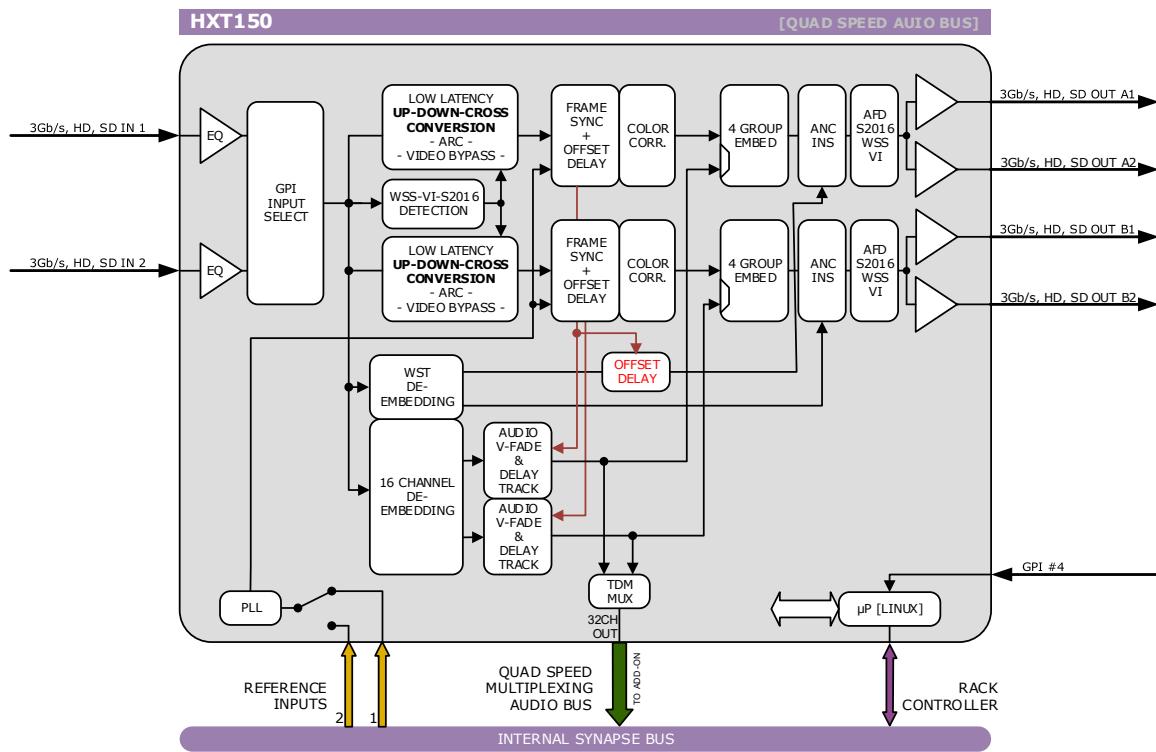Block schematic**Important notice**

Historically, closed captions were transmitted in NTSC line 21 according to EIA-608. This allows two caption data bytes per field to be transmitted. With the introduction of HD and DTV a new Closed Caption specification was made, EIA-708. This allows sending more data per field, for extended language, color support, PMT and EIT and timecode data.

The new DTV caption format cannot be translated back to EIA-608. However the EIA-708 may include EIA-608 data as "NTSC closed captions" for compatibility with old decoders.

This card only de-embeds the NTSC closed captions, not the DTV closed captions. It will not function with a DTV-only 708 closed caption source.

5 Settings Menu

Introduction

The settings menu displays the current state of each HXT150 setting and allows you to change or adjust it. Settings can be changed using the front panel of the Synapse frame (SFR18, SFR08 or SFR04) or with Cortex. Also the SCP08 control can be used. Please refer to chapter 3 for information on the Synapse front panel control and Cortex.

Note: All items preceded with a #-sign are part of the presets.

SYSTEM SETTINGS

IO-Ctrl

This card has separate presets for the input and output settings under the ‘SYSTEM SETTINGS’ header. With this item you select how the IO presets are controlled: Manually (manual) or via GPI-triggers (GPI, GPI-A, GPI-B or GPI-C). By default it is set to Manual.

IO_Prst_Act

With this item you can manually change the currently active IO settings. Can be any preset between 1 and 8. By default it is set to 1. All menu settings that are preceded with a ‘#’ -prefix under the ‘SYSTEM SETTINGS’ header are part of the preset.

IO_Prst_Edit

Here you can select which of the 8 selectable IO settings presets you want to edit. Changing this will not change the active preset, unless the currently active preset is the same you are going to edit. All menu settings that are preceded with a ‘#’ -prefix under the ‘SYSTEM SETTINGS’ header are part of the preset.

#Inp_Sel

With this item you can select which input you want to use. Can be SDI-1 (SDI input 1) or SDI-2 (SDI input 2). You can also choose a Zoneplate or Colorbar as input. Set to auto will automatically detect which SDI input holds a valid input. If both inputs have a correct input, SDI-1 will be chosen. The default for this setting is SDI-1.

#Out-FrmtA

With Out-FrmtA you can set what the output should be for outputs A1 and A2. Possible settings are:

- 1080i60 (default), 1080i50
- 1080p24
- 1080psf24
- 720p60, 720p50
- SD525, SD625

#F-delayA

F-DelayA sets the amount of delayed Frames for outputs A1 and A2. The available range is from 0 to 250 fields (dependant on the I/O). Default is 0F.

#V-delayA

V-DelayA setting allows adjustment of the vertical phase of the output signal for outputs A1 and A2 with respect to the selected reference input.

The V-Delay setting gives a delay in addition to the reference timing. For example: if the V-Delay is set to 10 TV HD lines, the output signal will be delayed by reference timing + 10 TV HD lines. The signal is delayed (advanced) with respect to the phase of the reference signal. The available range is from 0 to a maximum of 1125 lines (dependant on I/O format). The default setting is 0ln.

#H-delayA

The H-DelayA setting allows adjustment of the Horizontal phase of the output signal for outputs A1 and A2 with respect to the selected reference input.

The H-Delay setting gives a delay in addition to the reference timing. For example: if the H-Delay is set to 10 pixels, the output signal will be delayed by reference timing + 10 pixels. The signal is delayed (advanced) with respect to the phase of the reference signal. The available range is from 0 to a maximum of 5124 pixels (dependant on I/O format). The default setting is 0px.

#Out-FrmtB

With Out-FrmtB you can set what the output should be for outputs B1 and B2. Possible settings are:

- 1080i60 (default), 1080i50
- 1080p24
- 1080psf24
- 720p60, 720p50
- SD525, SD625

#F-delayB

F-DelayB sets the amount of delayed Frames for outputs B1 and B2. The available range is from 0 to 250 fields (dependant on the I/O). Default is 0F.

#V-delayB

V-DelayB setting allows adjustment of the vertical phase of the output signal for outputs B1 and B2 with respect to the selected reference input.

The V-Delay setting gives a delay in addition to the reference timing. For example: if the V-Delay is set to 10 TV HD lines, the output signal will be delayed by reference timing + 10 TV HD lines. The signal is delayed (advanced) with respect to the phase of the reference signal. The available range is from 0 to a maximum of 1125 lines (dependant on I/O format). The default setting is 0ln.

#H-delayA


The H-DelayB setting allows adjustment of the Horizontal phase of the output signal for outputs A1 and A2 with respect to the selected reference input.

The H-Delay setting gives a delay in addition to the reference timing. For example: if the H-Delay is set to 10 pixels, the output signal will be delayed by reference timing + 10 pixels. The signal is delayed (advanced) with respect to the phase of the reference signal. The available range is from 0 to a maximum of 5124 pixels (dependant on I/O format). The default setting is 0px.


#LowPassFiltA

Here you can set the horizontal and vertical video low-pass filter for channel A. These are the possible settings:


- Off: the normal broadband filters will be used when the card is converting. A 64 taps brick wall type horizontal filter:

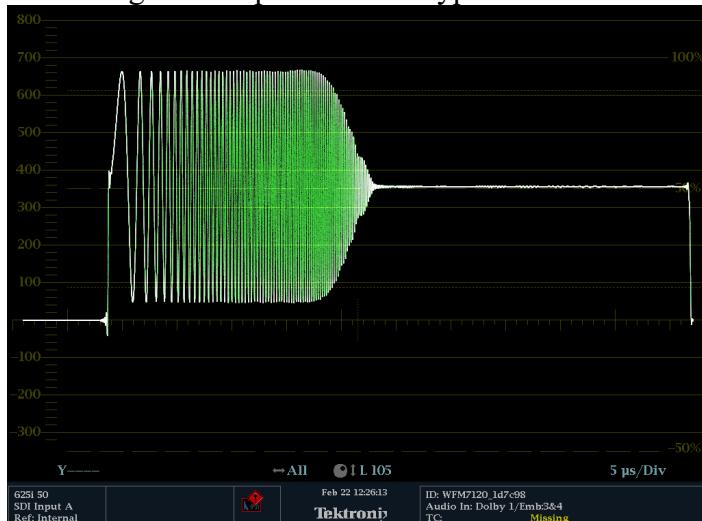

- H_only: a less steep filter with no aliasing Y and soft for C for less ringing effects:

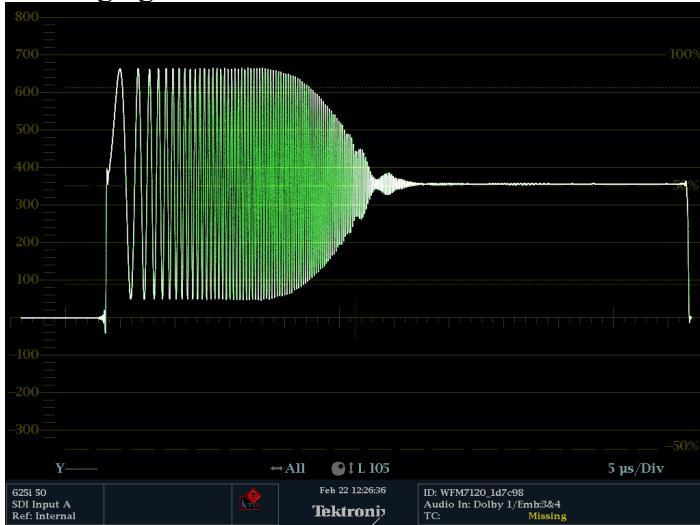

- V_only: vertical filters will be active which “soften” the image and prevents “ring”-effects in down converted content.
- H_And_V: same horizontal filter as described under H_Only will be active, together with the vertical filters described under V_only.
- H2_Only: less steep filter with aliasing and soft for C for less ringing, more sharpness but with aliasing:

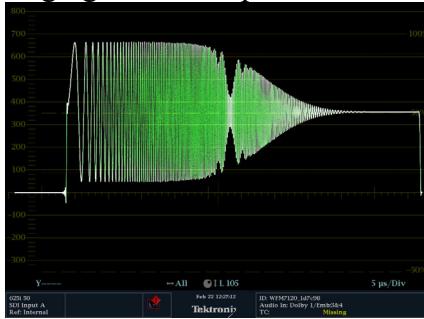

- H2_And_V: same horizontal filter as described under H2_Only will be active, together with the vertical filters described under V_only.

This setting is only for channel A. Default is off.

Note: This only works when *down-converting*.

#LowPassFiltB

This sets the horizontal and vertical low-pass filter for channel B. Refer to #LowPassFilt_A for an explanation of the possible settings.

#OP47-Demb_Ln

With this setting you select the line which the OP47 de-embedder de-embeds. Can be line 7 till line 20. Setting this to first will select the first OP47 packet (per field) when it comes by and ignores

	<p>all following packets. First is default for this setting.</p>
Delay-Status	<p>It is possible to display (in the status menu IODelay) the processing time of the card in the status menu. This setting allows you to switch this function ON or OFF. Default setting is OFF</p>
Lock-Mode	<p>Lock-Mode determines whether the card is locked to his input (input 1), to the reference (Ref1 or Ref2) or freerun (not locked). By default it is set to Ref1. Can also be set to RefAuto. When set to RefAuto the card chooses ref1 as its source. Whenever ref1 fails, it will switch to ref 2 (only for SFR08 and SFR18 frames and only when ref2 offers the same ref format as ref 1). When ref 1 is back up again, it will only automatically switch back to ref 1 when ref 2 fails.</p>
Ref-Type	<p>Sets the type of incoming reference. Can be either Bi-Level or Tri-Level. Default is Bi-Level.</p>
PrstEditView	<p>With this setting set to Follow Active, the edit preset settings (like for instance UP_Prst_editA and UP_Prst_editB) will follow the active preset when the active preset is changed. This to avoid confusion when changing the active. Set to Independent the edit preset will not automatically follow active preset changes. By default, set to Follow Active.</p>
PatternSpeed	<p>Sets the speed of the test-pattern (see settings Inp_SelA and Inp_SelB) animation between 0 (still) and 15 (fast). Default is 1.</p>
SD-AR-Det	<p>This card can switch between presets on the changes of the aspect ratio. Aspect ratio information can be taken out of the VI (video index), WSS (widescreen signaling) or WSS-extended (extended form of widescreen signaling). With this setting you can select which of the above protocols should be used to detect aspect ratio changes. By default, it is set to VI.</p>
NoWSS/VI_prstA	<p>With this setting you can set to which preset the card should jump outputs A1 and A2, when no WSS or VI information is found. Can be any preset between 1 and 16 or Hold (holds current active preset). By default it is set to Hold.</p>

NoWSS/VI_prstB	With this setting you can set to which preset the card should jump outputs B1 and B2, when no WSS or VI information is found. Can be any preset between 1 and 16 or Hold (holds current active preset). By default it is set to Hold.
Input_Loss_A	With this setting you select what should happen on the output when the input of channel A is lost. Can be one of the following: <ul style="list-style-type: none">▪ Freeze▪ Colorbar▪ Zoneplate▪ Black▪ Grey Green
ATC_TYPE_SEL	With this setting you select what type of ATC timecode is expected and decoded at the input. It can be set to VITC or ATC
TC_Detect	With this setting you select what type timecode is decoded at the input. It can be set to Off, VITC, ATC or VITC-SD_ATC-HD. The last setting automatically selects VITC if the input is SD-SDI and selects ATC if the input is HD-SDI.
UP-CONV	
Up_CtrlA	With this item you select how the presets for Channel A in up converter mode are controlled: Manually (manual), via GPI-triggers (GPI, GPI-A, GPI-B or GPI-C) or via changes of the SD Aspect Ratio (SD-AR). By default it is set to Manual.
Up_Prst_actA	With this item you can manually change the currently active preset of channel A in up converter mode. Can be any preset between 1 and 16. By default it is set to 1. All menu settings that are preceded with a '#Up'-prefix are part of the preset.
UP_Prst_editA	Here you can select which of the 16 selectable presets you want to edit for Channel A in up converter mode. Changing this will not change the active preset, unless the currently active preset is the same you are going to edit. All menu settings that are preceded with a '#Up'-prefix are part of the preset.

#Up_ArcA

With this item you set the Aspect Ratio of the output of channel A in up converter mode. Can be Anamorphic, V-Zoom, PBox-4 : 3, PBox-14 : 9 or Variable (custom set AR, set by H-scale and V-scale settings). The following table shows examples of the possible aspect ratios when the input source is 4:3.

Setting:	Result on 16:9 screens:
Anamorphic	
V-Zoom	
PBox-4 : 3	
PBox-14 : 9	
Variable	Dependant on Up_H-scale and UP_V-scale settings.

#Up_H-scaleA

The horizontal scaling of the TV picture of channel A in up converter mode is set using #Up_H-scaleA. #Up_H-scaleA can be set within the range of 50% to 200% of the input signal (only used when #Up_ArcA is set to variable). Default value is 100%.

#Up_V-scaleA

Sets the vertical scaling of the TV picture of channel A in up converter mode. Can be set within the range of 50% to 200% of the input signal (only used when #Up_ArcA is set to variable). Default value is 100%.

#Up_H-EnhA

With this item you can set the horizontal picture enhancement of channel A in up converter mode between 0 and 100%. By default set to 0%.

#Up_ColorConvA

ColorConvA optimizes the color conversion for Channel A in up converter mode. As the color coding of HD (709) and SD(601) are different, it is necessary to convert these when Channel A is up-converting. The best result is generated when the up-converter is active and the 601to709 setting is selected. It is also possible to switch the filter off. The default setting is 601to709.

Up_CtrlB	With this item you select how the presets for Channel B are controlled in up converter mode: Manually (manual), via GPI-triggers (GPI, GPI-A, GPI-B, GPI-C) or via changes of the SD Aspect Ratio (SD-AR). By default it is set to Manual.
Up_Prst_actB	With this item you can manually change the currently active preset of channel B in up converter mode. Can be any preset between 1 and 16. By default it is set to 1. All menu settings that are preceded with a '#Up'-prefix are part of the preset.
UP_Prst_editB	Here you can select which of the 16 selectable presets you want to edit for Channel B in up converter mode. Changing this will not change the active preset, unless the currently active preset is the same you are going to edit. All menu settings that are preceded with a '#Up'-prefix are part of the preset.
#Up_ArcB	With this item you set the Aspect Ratio of the output of channel B in up converter mode. Can be Anamorphic, V-Zoom, PBox-4 : 3, PBox-14 : 9 or Variable (custom set AR, set by H-scale and V-scale settings). The table in setting #Up_ArcA shows examples of the possible aspect ratios when the input source is 4:3.
#Up_H-scaleB	The horizontal scaling of the TV picture of channel B in up converter mode is set using #Up_H-scaleB. #Up_H-scaleB can be set within the range of 50% to 200% of the input signal (only used when #Up_ArcB is set to variable). Default value 100%.
#Up_V-scaleB	Sets the vertical scaling of the TV picture of channel B in up converter mode. Can be set within the range of 50% to 200% of the input signal (only used when #Up_ArcB is set to variable). Default value is 100%.
#Up_H-EnhB	With this item you can set the horizontal picture enhancement of channel B in up converter mode between 0 and 100%. By default set to 0%.
#Up_ColorConvB	ColorConvB optimizes the color conversion in up converter mode. As the color coding of HD (709) and SD (601) are different, it is necessary to convert these when Channel B is up-converting. The best result is generated when the up-converter is active and the 601to709 setting is selected. It is also possible to switch the filter off. The default setting is 601to709.

DOWN-CONV

Dn_CtrlA

With this item you select how the presets for Channel A are controlled in down converter mode: Manually (manual), via GPI-triggers (GPI, GPI-A, GPI-B or GPI-C) or via changes of the HD Aspect Ratio (S2016). By default it is set to Manual.

Dn_Prst_actA

With this item you can manually change the currently active preset of channel A in down converter mode. Can be any preset between 1 and 16. By default it is set to 1. All menu settings that are preceded with a '#Dn'-prefix are part of the preset.

Dn_Prst_editA

Here you can select which of the 16 selectable presets you want to edit for Channel A in down converter mode. Changing this will not change the active preset, unless the currently active preset is the same you are going to edit. All menu settings that are preceded with a '#Dn'-prefix are part of the preset.

#Dn_ArcA

With this item you set the ARC of the output of channel A in down converter mode. Can be Anamorphic, CenterCut, LBox-16:9, LBox-14:9 or Variable. The following table shows examples of the possible aspect ratios when the input source is 16:9.


Setting:	Result on 4:3 screens:
Anamorphic	
CenterCut	
LBox-16:9	
LBox-14:9	
Variable	Dependant on Dn_H-scale and Dn_V-scale settings.

#Dn_H-scaleA	The horizontal scaling of the TV picture of channel A in down converter mode is set using #Dn_H-scaleA. #Dn_H-scaleA can be set within the range of 50% to 200% of the input signal (only used when #Dn_ArcA is set to variable). Default value is 100%.
#Dn_V-scaleA	Sets the vertical scaling of the TV picture of channel A in down converter mode. Can be set within the range of 50% to 200% of the input signal (only used when #Dn_ArcA is set to variable). Default value is 100%.
#Dn_H-EnhA	With this item you can set the horizontal picture enhancement of channel A in down converter mode between 0 and 100%. By default set to 0%.
#Dn_ColorConvA	ColorConvA optimizes the color conversion of channel A in down converter mode. As the color coding of HD (709) and SD (601) are different, it is necessary to convert these when Channel A is up-converting. The best result is generated when the up-converter is active and the 709to601 setting is selected. It is also possible to switch the filter off. The default setting is Off.
Dn_CtrlB	With this item you select how the presets for Channel B are controlled in down converter mode: Manually (manual), via GPI-triggers (GPI, GPI-A, GPI-B or GPI-C) or via changes of the HD Aspect Ratio (S2016). By default it is set to Manual.
Dn_Prst_actB	With this item you can manually change the currently active preset of channel B in down converter mode. Can be any preset between 1 and 16. By default it is set to 1. All menu settings that are preceded with a '#Dn'-prefix are part of the preset.
Dn_Prst_editB	Here you can select which of the 16 selectable presets you want to edit for Channel B in down converter mode. Changing this will not change the active preset, unless the currently active preset is the same you are going to edit. All menu settings that are preceded with a '#Dn'-prefix are part of the preset.
#Dn_ArcB	With this item you set the Aspect Ratio of the output of channel B in down converter mode. Can be Anamorphic, CenterCut, LBox-16:9, LBox-14:9 or Variable (custom set AR, set by H-scale and V-scale settings). The table in #Dn_ArcA shows examples of the possible aspect ratios when the input source is 16:9.

#Dn_H-scaleB	The horizontal scaling of the TV picture of channel B in down converter mode is set using #Dn_H-scaleB. #Dn_H-scaleB can be set within the range of 50% to 200% of the input signal (only used when #Dn_ArcA is set to variable). Default value is 100.
#Dn_V-scaleB	Sets the vertical scaling of the TV picture of channel B in down converter mode. Can be set within the range of 50% to 200% of the input signal (only used when #Dn_ArcB is set to variable). Default value is 100%.
#Dn_H-EnhB	With this item you can set the horizontal picture enhancement of channel B in down converter mode between 0 and 100%. By default set to 0%.
#Dn_ColorConvB	ColorConvB optimizes the color conversion of channel B in down converter mode. As the color coding of HD (709) and SD (601) are different, it is necessary to convert these when Channel B is up-converting. The best result is generated when the up-converter is active and the 709to601 setting is selected. It is also possible to switch the filter off. The default setting is Off.
CROSS-CONV	
Cr_CtrlA	With this item you select how the presets for Channel A are controlled in cross converter mode: Manually (manual), via GPI-triggers (GPI, GPI-A, GPI-B or GPI-C), the SD aspect ratio (SD-AR) or via changes of the HD Aspect Ratio (S2016). By default it is set to Manual.
Cr_Prst_actA	With this item you can manually change the currently active preset of channel A in cross converter mode. Can be any preset between 1 and 16. By default it is set to 1. All menu settings that are preceded with a '#Cr'-prefix are part of the preset.
Cr_Prst_editA	Here you can select which of the 16 selectable presets you want to edit for Channel A in cross converter mode. Changing this will not change the active preset, unless the currently active preset is the same you are going to edit. All menu settings that are preceded with a '#Cr'-prefix are part of the preset.

#Cr_ArcA

With this item you set the Aspect Ratio of the output of channel A in cross converter mode. Can be Anamorphic, V-Zoom, CenterCut, LBox-16:9, LBox-14:9, PBox-4:3, PBox-14:9 or Variable (custom set AR, set by H-scale and V-scale settings). The following table shows examples of the aspect ratios.

Setting:	Result:	
Anamorphic		With 16:9 source on 4:3 screens
V-Zoom		With 4:3 source on 16:9 screens
CenterCut		With 16:9 source on 4:3 screens
LBox-16:9		With 16:9 source on 4:3 screens
LBox-14:9		With 16:9 source on 4:3 screens
PBox-4:3		With 4:3 source on 16:9 screens
PBox-14:9		With 4:3 source on 16:9 screens
Variable		Dependant on Cr_H-scale and Cr_V-scale settings.

#Cr_H-scaleA

The horizontal scaling of the TV picture of channel A in cross converter mode is set using #Cr_H-scaleA. #Cr_H-scaleA can be set within the range of 50% to 200% of the input signal (only used when #Cr_ArcA is set to variable). Default value is 100%.

#Cr_V-scaleA

Sets the vertical scaling of the TV picture of channel A in cross converter mode. Can be set within the range of 50% to 200% of the input signal (only used when #Up_ArcA is set to variable). Default value is 100%.

#Cr_H-EnhA

With this item you can set the horizontal picture enhancement of channel A in cross converter mode between 0 and 100%. By default set to 0%.

Cr_CtrlB	With this item you select how the presets for Channel B are controlled in cross converter mode: Manually (manual), via GPI-triggers (GPI, GPI-A, GPI-B or GPI-C), the SD aspect ratio (SD-AR) or via changes of the HD Aspect Ratio (S2016). By default it is set to Manual.
Cr_Prst_actB	With this item you can manually change the currently active preset of channel B in cross converter mode. Can be any preset between 1 and 16. By default it is set to 1. All menu settings that are preceded with a '#Cr'-prefix are part of the preset.
Cr_Prst_editB	Here you can select which of the 16 selectable presets you want to edit for Channel B in cross converter mode. Changing this will not change the active preset, unless the currently active preset is the same you are going to edit. All menu settings that are preceded with a '#Cr'-prefix are part of the preset.
#Cr_ArcB	With this item you set the Aspect Ratio of the output of channel B in cross converter mode. Can be Anamorphic, V-Zoom, CenterCut, LBox-16:9, LBox-14:9, PBox-4:3, PBox-14:9 or Variable (custom set AR, set by H-scale and V-scale settings). The table under #Cr_ArcA shows examples of the possible aspect ratios.
#Cr_H-scaleB	The horizontal scaling of the TV picture of channel B in cross converter mode is set using #Cr_H-scaleB. #Cr_H-scaleB can be set within the range of 50% to 200% of the input signal (only used when #Cr_ArcB is set to variable). Default value is 100%.
#Cr_V-scaleB	Sets the vertical scaling of the TV picture of channel B in cross converter mode. Can be set within the range of 50% to 200% of the input signal (only used when #Up_ArcB is set to variable). Default value is 100%.
#Cr_H-EnhB	With this item you can set the horizontal picture enhancement of channel B in cross converter mode between 0 and 100%. By default set to 0%.

TRANSPARENT

In transparent mode (no conversion) the card is not transparent for horizontal and vertical blanking, except for selected ANC data handling.

Tr_CtrlA

With this item you select how the presets for Channel A are controlled in Transparent mode: Manually (manual), via GPI-triggers (GPI, GPI-A, GPI-B or GPI-C) or via changes of the HD Aspect Ratio (S2016). By default it is set to Manual.

Tr_Prst_ActA

With this item you can manually change the currently active preset of channel A in Transparent mode. Can be any preset between 1 and 16. By default it is set to 1. All menu settings that are preceded with a '#Tr'-prefix are part of the preset.

Tr_Prst_EditA

Here you can select which of the 16 selectable presets you want to edit for Channel A in Transparent mode. Changing this will not change the active preset, unless the currently active preset is the same as the one you are going to edit. All menu settings that are preceded with a '#Tr'-prefix are part of the preset.

#Tr_ArcA

With this item you set the Aspect Ratio of the output of channel A in Transparent mode. Can be Anamorphic or Variable (custom set AR, set by H-scale and V-scale settings). The following table shows examples of the possible aspect ratios.

Setting:	Result:	
Anamorphic		With 16:9 source on 4:3 screens
Variable		Dependant on Tr_H-scale and Tr_V-scale settings.

#Tr_H-scaleA

The horizontal scaling of the TV picture of channel A in Transparent mode is set using #Tr_H-scaleA. #Tr_H-scaleA can be set within the range of 50% to 200% of the input signal (only used when #Tr_ArcA is set to variable). Default value is 100%.

#Tr_V-scaleA

Sets the vertical scaling of the TV picture of channel A in Transparent mode. Can be set within the range of 50% to 200% of the input signal (only used when #Up_ArcA is set to variable). Default value is 100%.

#Tr_H-EnhA	With this item you can set the horizontal picture enhancement of channel A in Transparent mode between 0 and 100%. By default set to 0%.
Tr_CtrlB	With this item you select how the presets for Channel B are controlled in Transparent mode: Manually (manual), via GPI-triggers (GPI, GPI-A, GPI-B or GPI-C) or via changes of the HD Aspect Ratio (S2016). By default it is set to Manual.
Tr_Prst_ActB	With this item you can manually change the currently active preset of channel B in Transparent mode. Can be any preset between 1 and 16. By default it is set to 1. All menu settings that are preceded with a '#Tr'-prefix are part of the preset.
Tr_Prst_EditB	Here you can select which of the 16 selectable presets you want to edit for Channel B in Transparent mode. Changing this will not change the active preset, unless the currently active preset is the same you are going to edit. All menu settings that are preceded with a '#Tr'-prefix are part of the preset.
#Tr_ArcB	With this item you set the Aspect Ratio of the output of channel B in Transparent mode. Can be Anamorphic, V-Zoom, PBox-4 : 3, PBox-14 : 9 or Variable (custom set AR, set by H-scale and V-scale settings). The table under #Tr_ArcA shows examples of the possible aspect ratios.
#Tr_H-scaleB	The horizontal scaling of the TV picture of channel B in Transparent mode is set using #Tr_H-scaleB. #Tr_H-scaleB can be set within the range of 50% to 200% of the input signal (only used when #Tr_ArcB is set to variable). Default value is 100%.
#Tr_V-scaleB	Sets the vertical scaling of the TV picture of channel B in Transparent mode. Can be set within the range of 50% to 200% of the input signal (only used when #Up_ArcB is set to variable). Default value is 100%.
#Tr_H-EnhB	With this item you can set the horizontal picture enhancement of channel B in Transparent mode between 0 and 100%. By default set to 0%.

INSERTER

This card can insert several data values in the VBI of the outputs. With the following settings you can choose what you want to insert.

S2010EmbA-Mode

With this setting you select if the S2010 (SMPTE 2010) data embedder is turned On or Off. Default is Off. S2010 is also known as SCTE104. S2010 data needs to be in the input signal and is automatically extracted and inserted in channel A when this setting is turned On. Note that there is NO extra frame delay compensation for this data. So the S2010 data is only frame aligned when the F-delay is set to 0.

S2010EmbA-Line

With this setting you select a line to where the S2010 (SMPTE 2016) data should be written. By default, it is set to line 9.

S2010EmbB-Mode

With this setting you select if the S2010 (SMPTE 2010) data embedder is turned On or Off. Default is Off. S2010 is also known as SCTE104. S2010 data needs to be in the input signal and is automatically extracted and inserted in channel B when this setting is turned On. Note that there is NO extra frame delay compensation for this data. So the S2010 data is only frame aligned when the F-delay is set to 0.

S2010EmbB-Line

With this setting you select a line to where the S2010 (SMPTE 2016) data should be written. By default, it is set to line 9.

WST_Ln_Ctrl

With this setting you select if the line numbers used for WST teletext insertion are extracted from the input (encapsulated in the OP47) or manually overwritten by the next WST_Ln settings.

In cortex there is a panel with tickboxes so you can select any line in each field and the vector is generated.

Note: There is no safety mechanism. If more lines are available in OP47 than selected lines they will be lost. So to be safe you have to enable all maximum 5 lines.

WST_Ln_F1_A

With this setting you select the lines used for WST insertion of the first field of channel A. It is a number from 0..65535 (= 0000.0000.0000.0000 binary)

For the first vector Bit 0 is line 7, bit 1 line 8 and so on.

WST_Ln_F2_A	With this setting you select the lines used for WST insertion of the second field of channel A. It is a number from 0..65535 (= 0000.0000.0000.0000 binary) For the first vector Bit 0 is line 320, bit 1 line 321 and so on.
WST_Ln_F1_B	With this setting you select the lines used for WST insertion of the first field of channel B. It is a number from 0..65535 (= 0000.0000.0000.0000 binary) For the first vector Bit 0 is line 7, bit 1 line 8 and so on.
WST_Ln_F2_B	With this setting you select the lines used for WST insertion of the second field of channel B. It is a number from 0..65535 (= 0000.0000.0000.0000 binary) For the first vector Bit 0 is line 320, bit 1 line 321 and so on.
Timecode-ins	Set to on will enable the following VITC settings to copy the time code information from the input to the output. Set to off will disable all embedded time code data on the output.
VITC_Ln_In	With this setting you can select what line of the input you want to copy the VITC data from (only when input is SD). Can be any line between line 7 and line 22. Default is line 19.
VITC_Ln_Ctrl	Here you can choose whether you want to select the line, to where you want to copy the timecode data to, manually (manual) or use the information in the ATC_DB package to select the lines (ATC_DB package contains information about the line duplication as well). Default is Manual .
VITC_Ln_625	When VITC_Ln_Ctrl is set to Manual , with this setting you can select a line between 7 and 22 when the output is SD625. Default is line 19.
VITC_Ln_525	When VITC_Ln_Ctrl is set to Manual , with this setting you can select a line between 7 and 22 when the output is SD525. Default is line 10.
VITC_Ln_Dup	When set to On , the VITC line is duplicated to the above selected line + 2 lines.

Ins_CtrlA	With this item you select how the inserter presets for Channel A are controlled: Manually (manual), via GPI-triggers (GPI, GPI-A, GPI-B or GPI-C), via changes of the SD Aspect Ratio (SD_AR) or the HD aspect ratio (S2016) (AFD)). Default is Manual.
Ins_Prst_ActA	With this item you can manually change the currently active preset of channel A when in transparent mode. Can be any preset between 1 and 16. By default it is set to 1. All menu settings that are preceded with a '#Ins'-prefix are part of the preset.
Ins_Prst_EditA	Here you can select which of the 16 selectable presets you want to edit for Channel A when in a transparent mode. Changing this will not change the active preset, unless the currently active preset is the same you are going to edit. All menu settings that are preceded with a '#Ins'-prefix are part of the preset.
#VI-InsertA	You can turn VI insertion on or off for channel A. Default is Off.
#VI-DataA	With the #VI-InsertA setting set to on, you can select VI values with this setting, which you want to insert in Channel A. possible are all VI values between 4:3_0 and 4:3_7 and the settings between 16:9_0 and 16:9_7. Default is 4:3_0.
#WSS-InsertA	You can choose which type of WSS data you want to insert in Channel A with this setting, or switch WSS insertion entirely off (default value). You can set it to Standard or Extended.
#WSS-StndA	With the #WSS-InsertA setting set to Standard, you can select WSS standard values with this setting, which you want to insert in Channel A. possible are all WSS values between 1_vid and 8_vid and the settings between 1_flm and 8_flm. Default is 1_vid.
#WSS-ExtndA	With the #WSS-InsertA setting set to Extended, you can select WSS extended values with this setting, which you want to insert in Channel A. possible are all WSS values between 4:3_0 and 4:3_7 and the settings between 16:9_0 and 16:9_7. Default is 4:3_0.

S2016-Line	With this setting you select a line in the VBI to where the AFD (SMPTE 2016) data should be written. Lines 0 till 31 are selectable. By default it is set to line 17.
#S2016-InsertA	You can turn S2016 (AFD) insertion on or off for channel A. Default is Off.
#S2016-AspectA	Whit setting you select the aspect ratio of the S2016 above. Options are 4 : 3 or 16 : 9. Default is 4 : 3.
#S2016-DataA	With the #S2016-InsertA setting set to on, you can select AFD values with this setting, which you want to be inserted in Channel A. possible are all AFD values between AFD0 and AFD15.
#OP47-SDP-Emb_A	With this setting you set in which line the OP47 data should be inserted in channel A. Can be any line between line 8 and line 16. Can also be switched off (causing the OP47 data to not be inserted at all).
#CC_Ena_A	This setting sets the Closed Captioning transparency for channel A On or Off. Default is Off.
Ins_CtrlB	With this item you select how the inserter presets for Channel A are controlled: Manually (manual), via GPI-triggers (GPI), via changes of the HD Aspect Ratio (VI, WSS, WSS-ext or S2016 (AFD)). Default is Manual.
Ins_Prst_ActB	With this item you can manually change the currently active preset of Channel B when in transparent mode. Can be any preset between 1 and 16. By default it is set to 1. All menu settings that are preceded with a #Ins-prefix are part of the preset.
Ins_Prst_EditB	Here you can select which of the 16 selectable presets you want to edit for Channel B when in a transparent mode. Changing this will not change the active preset, unless the currently active preset is the same you are going to edit. All menu settings that are preceded with a #Ins-prefix are part of the preset.
#VI-InsertB	You can turn VI insertion on or off for channel B. Default is Off.

#VI-DataB	With the #VI-InsertB setting set to on, you can select VI values with this setting, which you want to insert in Channel B. possible are all VI values between 4:3_0 and 4:3_7 and the settings between 16:9_0 and 16:9_7. Default is 4:3_0.
#WSS-InsertB	You can choose which type of WSS data you want to insert in Channel B with this setting, or switch WSS insertion entirely off (default value). You can set it to Standard or Extended.
#WSS-StndB	With the #WSS-InsertB setting set to Standard, you can select WSS standard values with this setting, which you want to insert in Channel B. possible are all WSS values between 1_vid and 8_vid and the settings between 1_flm and 8_flm. Default is 1_vid.
#WSS-ExtndB	With the #WSS-InsertB setting set to Extended, you can select WSS extended values with this setting, which you want to insert in Channel B. possible are all WSS values between 4:3_0 and 4:3_7 and the settings between 16:9_0 and 16:9_7. Default is 4:3_0.
#S2016-InsertB	You can turn S2016 (AFD) insertion on or off for Channel B. Default is Off.
#S2016-AspectB	With this setting you select the aspect ratio of the S2016 above. Options are 4:3 or 16:9. Default is 4:3.
#S2016-DataB	With the #S2016-InsertB setting set to on, you can select AFD values with this setting, which you want to be inserted in Channel B. possible are all AFD values between AFD0 and AFD15.
#OP47-SDP-Emb_B	With this setting you set in which line the OP47 data should be inserted in channel B. Can be any line between line 8 and line 16. Can also be switched off (causing the OP47 data to not be inserted at all).
#CC_Ena_B	This setting sets the Closed Captioning transparency for channel B On or Off. Default is Off.

VIDEO PROC

GainA With this setting you control the overall gain of the video of channel A between 50 and 150%. Default is 100%.

R-GainA R-GainA controls the Red gain of channel A. The control range is between 50% and 150%. The default setting is 100%.

G-GainA G-GainA controls the Green gain of channel A. The control range is between 50% and 150%. The default setting is 100%.

B-GainA B-GainA controls the Blue gain of channel A. The control range is between 50% and 150%. The default setting is 100%.

GainB With this setting you control the overall gain of the video of channel B between 50 and 150%. Default is 100%.

R-GainB R-GainB controls the Red gain of channel B. The control range is between 50% and 150%. The default setting is 100%.

G-GainB G-GainB controls the Green gain of channel B. The control range is between 50% and 150%. The default setting is 100%.

B-GainB B-GainB controls the Blue gain of channel B. The control range is between 50% and 150%. The default setting is 100%.

BlackA BlackA controls the total R-G-B Black gain of channel A. The control range is between -128bit and 127bit. The default setting is 0bit.

R-BlackA R-BlackA controls the Red-Black of channel A. The control range is between -128bits and 127 bits in steps of 1 bit. The default setting is 0 bit.

G-BlackA G-BlackA controls the Green-Black of channel A. The control range is between -128bits and 127 bits in steps of 1 bit. The default setting is 0 bit.

B-BlackA	B-BlackA controls the Blue-Black of channel A. The control range is between –128bits and 127 bits in steps of 1 bit The default setting is 0 bit.
BlackB	BlackB controls the total R-G-B Black gain of channel B. The control range is between –128bit and 127bit. The default setting is 0bit.
R-BlackB	R-BlackB controls the Red-Black of channel B. The control range is between –128bits and 127 bits in steps of 1 bit The default setting is 0 bit.
G-BlackB	G-BlackB controls the Green-Black of channel B. The control range is between –128bits and 127 bits in steps of 1 bit The default setting is 0 bit.
B-BlackB	B-BlackB controls the Blue-Black of channel B. The control range is between –128bits and 127 bits in steps of 1 bit The default setting is 0 bit.
AUDIO PROC AMP	
Audio-Phase	If this setting is set to Align, the card ensures audio-phase alignment between multiple audio channels and audio groups, which is necessary for multi-channel (surround) purposes. If errors in the signal-chain occur the de-embedder blocks reset synchronously to maintain audio-phase-alignment. If this setting is set to Off, the card eats-all audio including errors. Even if there are DBN/ANC/ECC or channel-sequence errors, the de-embedder will pass them. Be aware that audio-phase-alignment between multiple audio channels and audio groups can not be maintained if this setting is set to Off. <i>Note:</i> This setting can be helpful to solve problems in the field using equipment which doesn't follow the standards correctly.
Audio_Ctrl	With this setting you select how the audio presets should be controlled. Can be either Manually (Manual), via GPI-triggers (GPI, GPI-A, GPI-B or GPI-C), via the SD aspect ratio (SD-AR) or via the HD aspect ratio (S2016).

Audio_Prst_act	With this item you can manually change the currently active audio preset. Can be any preset between 1 and 16. By default it is set to 1. All menu settings that are preceded with a '#Emb'-prefix are part of the preset.
Audio_Prst_Edit	Here you can select which of the 16 selectable audio presets you want to edit. Changing this will not change the active preset, unless the currently active preset is the same you are going to edit. All menu settings that are preceded with a '#Emb'-prefix are part of the preset.
#Direct-Audio	With this setting you choose whether the audio should come from the de-embedder (Dembo-Input) or from the ADD-ON bus. Default is Dembo-Input.
EMBEDDER	
#EmbA_Grp	With this setting you select in to which audio group (= 4 audio channels) of the outputs you want to embed the first 4 forwarded audio channels coming from the de-embedder/add-on bus. Can be group1, group2, group3 or group4. You can also choose to not use these 4 audio channels for anything by setting this item to off. By default it is set to Group1.
#EmbB_Grp	With this setting you select in to which audio group (= 4 audio channels) of the outputs you want to embed the second 4 forwarded audio channels coming from the de-embedders/add-on bus. Can be group1, group2, group3 or group4. You can also choose to not use these 4 audio channels for anything by setting this item to off. By default it is set to Group2.
#EmbC_Grp	With this setting you select in to which audio group (= 4 audio channels) of the outputs you want to embed the third group of 4 forwarded audio channels coming from the de-embedders/add-on bus. Can be group1, group2, group3 or group4. You can also choose to not use these 4 audio channels for anything by setting this item to off. By default it is set to Group3.

#EmbD_Grp

With this setting you select in to which audio group (= 4 audio channels) of the outputs you want to embed the last 4 forwarded audio channels coming from the de-embedders/add-on bus. Can be group1, group2, group3 or group4. You can also choose to not use these 4 audio channels for anything by setting this item to off. By default it is set to Group4.

GPI-CTRL**GPI-Ctrl**

You can set the GPI to be triggered in a latching manner or in a nonLatching manner. Default for this is Latch.

GPI_1 ~ GPI_5

In this card it is possible to make the 5 available GPI triggers part of a GPI pool that can control the various functions in the card separately (all Xx_Ctrl items of the menu). With these items you can select which pool the corresponding GPI is part of and in what way it should trigger. You can also choose to not use the corresponding GPI at all by setting it to Off. Possible settings are:

- GPI A: part of GPI-A pool, triggered once Take A is closed.
- GPI B: part of GPI-B pool, triggered once Take B is closed.
- Take A: part of GPI-A pool, used to trigger GPI A.
- Take B: part of GPI-B pool, used to trigger GPI B.
- GPI Prio A: part of GPI-A pool, working in a priority manner (highest closed GPI of the pool is activated)
- GPI Prio B: part of GPI-B pool, working in a priority manner (highest closed GPI of the pool is activated)
- GPI Prio C: part of GPI-C pool, working in a priority manner (highest closed GPI of the pool is activated)

Please refer to ‘Appendix 1: GPI’s explained’ for a more elaborate explanation of the GPI settings.

NETWORK**IP_Conf0**

With this setting you can let the card obtain an IP address automatically via DHCP, or appoint a manual set IP address. By default this setting is set to Manual.

mIP0

When IP_Conf0 is set to manual, you can type in the preferred IP address here. By default it is set to 172.16.1.2

mNMO

With IP_Conf0 set to manual, with this setting you can set a Netmask. Default is 255.255.0.0

mGW0 With IP_Conf0 set to manual, this setting let you set a Standard Gateway. Default is set to 172.16.0.1

NetwPrefix0 Here you can set the proper network prefix if required.

6 Status Menu

Introduction	The status menu indicates the current status of each item listed below.
Active	This status item indicates which input is active on the outputs, SDI-1 or SDI-2.
sInp1	This status item indicates the presence and format of a valid signal in input 1. This is displayed as: <ul style="list-style-type: none">▪ 1080P60▪ 1080p50▪ 1080i60▪ 1080i50▪ 1080p30▪ 1080p25▪ 1080p24▪ 1035i60▪ 720p60▪ 720p50▪ 720p30▪ 720p25▪ 720p24▪ SD525▪ SD625▪ NA
sInp1_VI	Displays the detected VI value found in input1. This is displayed as follows: <ul style="list-style-type: none">▪ 4:3_0▪ 4:3_1▪ 4:3_2▪ 4:3_3▪ 4:3_4▪ 4:3_5▪ 4:3_6▪ 4:3_7▪ 16:9_0▪ 16:9_1▪ 16:9_2▪ 16:9_3▪ 16:9_4▪ 16:9_5▪ 16:9_6▪ 16:9_7▪ NA (no VI detected)

sInp1_WSS-Stnd

This status item displays the detected standard WSS value of input 1. this is displayed as follows:

- 1_vid
- 2_vid
- 3_vid
- 4_vid
- 5_vid
- 6_vid
- 7_vid
- 8_vid
- 1_film
- 2_film
- 3_film
- 4_film
- 5_film
- 6_film
- 7_film
- 8_film
- NA (no standard WSS detected)

sInp1_WSS-Extd

This item displays the detected extended WSS value of input 1. This is displayed as follows:

- 4:3_0
- 4:3_1
- 4:3_2
- 4:3_3
- 4:3_4
- 4:3_5
- 4:3_6
- 4:3_7
- 16:9_0
- 16:9_1
- 16:9_2
- 16:9_3
- 16:9_4
- 16:9_5
- 16:9_6
- 16:9_7
- NA (no WSS extended detected)

sInp1_S2016	This item displays the detected SMPTE 2016 (AFD) values of input 1. This is displayed as follows: <ul style="list-style-type: none">▪ AFD0▪ AFD1▪ AFD2▪ AFD3▪ AFD4▪ AFD5▪ AFD6▪ AFD7▪ AFD8▪ AFD9▪ AFD10▪ AFD11▪ AFD12▪ AFD13▪ AFD14▪ AFD15▪ NA (no S2016 detected)
sInp1_CRC_EDH	This item indicates if there are EDH or CRC errors on input 1. Can be OK, Error or NA (no input).
SDI1S2010Stat	This item indicates if there is S2010 (SCTE104) present. Can be NA, OK or Error.
SDI1S2010lineSt	This item indicates the detected line number of the S2010 (SCTE104).
sInp2	This status item indicates the presence and format of a valid signal in input 2. This is displayed as listed under sInp1.
sInp2_VI	Displays the detected VI value found in input2. This is displayed as listed under sInp1_VI.
sInp2_WSS-Stnd	Displays the detected WSS-standard value found in input2. This is displayed as listed under sInp1_WSS-Stnd.
sInp2_WSS-Extnd	Displays the detected WSS-extended value found in input2. This is displayed as listed under sInp1_WSS-ext.
sInp2_S2016	Displays the detected S2016 value found in input2. This is displayed as listed under sInp1_S2016.

sInp2_CRC_EDH	This item indicates if there are EDH or CRC errors on input 2. Can be OK, Error or NA (no input).
IODelayA	Displays the total delay in ms of outputs A1 and A2. can be a value between 0ms and 5000ms.
IODelayB	Displays the total delay in ms of outputs B1 and B2. can be a value between 0ms and 5000ms.
FunctionA	Displays the current function outputs A1 and A2. For the card it can only be Up, Down, Cross, Trans, TestPattern or NA.
FunctionB	Displays the current function outputs B1 and B2. For the card it can only be Up, Down, Cross, Trans, TestPattern or NA.
Ref	Displays whether a correct reference is found (Present) or not (NA)
GPI	Displays the currently closed GPI contacts. This is displayed as for instance 1_3_ when contacts 1 and 3 are closed and for instance _234 when contacts 2, 3 and 4 are closed.
GPIA	Displays the current value of GPI pool A
GPIB	Displays the current value of GPI pool B
GPIC	Displays the current value of GPI pool C
OP47-Det-A	Indicates if OP47 has been detected on input A.
OP47-Det-B	Indicates if OP47 has been detected on the input B.
WST-Det-A	Indicates if teletext/closed captions has been detected on input A.
WST-Det-B	Indicates if teletext/closed captions has been detected on input B.

CC_Det_A	Indicates if Closed Captioning is detected on input A
CC_Det_B	Indicates if Closed Captioning is detected on input B
NET STATUS	
IP_Addr0	This item displays the status of the IP address. It can be manual, DHCP asking, DHCP Leased or DHCP Infin.
MAC0	This item displays the MAC address of the card.
IP0	This item displays the current IP address of the card.
NM0	This item displays the current Netmask of the card.
GW0	This item displays the current Standard Gateway of the card.

7 Events Menu

Introduction	An event is a special message that is generated on the card asynchronously. This means that it is not the response to a request to the card, but a spontaneous message.
What is the Goal of an event?	The goal of events is to inform the environment about a changing condition on the card. A message may be broadcast to mark the change in status. The message is volatile and cannot be retrieved from the system after it has been broadcast. There are several means by which the message can be filtered.
Events	The events reported by the HXT150 are as follows;
Announcements	Announcements is not an event. This item is only used for switching the announcement of status changes on/off. 0=off, other =on
Input_A	Input_A can be selected between 0 .. 255. 0= no event, 1..255 is the priority setting.
Input_B	Input_B can be selected between 0 .. 255. 0= no event, 1..255 is the priority setting.
Ref_Status	Reference can be selected between 0 .. 255. 0= no event, 1..255 is the priority setting.
What information is available in an event?	<p>The message consists of the following items;</p> <ol style="list-style-type: none">1) A message string to show what has happened in text, for example: "INP_LOSS", "REF_LOSS", "INP_RETURN".2) A tag that also shows what happens, but with a predefined number: e.g. 1 (= loss of input), 2 (= loss of reference), 129(= 1+128 = return of input). For a list of these predefined tags see the table on the next page.3) A priority that marks the importance of an event. This value is defined by the user and can have any value between 1 and 255, or 0 when disabled.4) A slot number of the source of this event.

The Message String

The message string is defined in the card and is therefore fixed. It may be used in controlling software like Synapse Set-up to show the event.

The Tag

The tag is also defined in the card. The tag has a fixed meaning. When controlling or monitoring software should make decisions based on events, it is easier to use the tag instead of interpreting a string. The first implementation is the tag controlled switch in the GPI16.

In cases where the event marks a change to fault status (e.g. 1 for Loss of Input) the complement is marked by the tag increased by 128 (80_{hex}) (e.g. 129 (81_{hex}) for Return of Input).

Defining Tags

The tags defined for the card are:

Event Menu Item	Tag		Description
Announcements	0 or NA	0 or NA	Announcement of report and control values
Input_A	01 _{hex} =INPA_LOSS	81 _{hex} =INPA_RETURN	input A lost or returned
Input_B	02 _{hex} =INPB_LOSS	82 _{hex} =INPB_RETURN	input B lost or returned
Reference	03 _{hex} =REF_LOSS	83 _{hex} =REF_RETURN	reference lost or returned

The Priority

The priority is a user-defined value. The higher the priority of the alarm, the higher this value. Setting the priority to Zero disables the announcement of this alarm. Alarms with priorities equal or higher than the Error Threshold setting of the RRC will cause the error LED on the Synapse rack front panel to light.


The Address

Together with the message string or the tag, the slot number or address of the card is relevant to be able to assign the event to a certain card.

8 LED Indication


Error LED	The error LED indicates an error if the internal logic of the card is not configured correctly or has a hardware failure.
Input_A LED	This LED indicated the presence of a valid SDI video signal on input A.
Input_B LED	This LED indicated the presence of a valid SDI video signal on input B.
ANC Data LED	Indicates the presence of embedded audio within the input signal.
Reference LED	Indicated the presence of a valid reference signal on the selected reference input connector (ref-1 or ref-2).
Data Error LED	This LED indicates a CRC error.
Connection LED	This LED illuminates after the card has initialized. The LED lights for 0.5 seconds every time a connection is made to the card.
Error LED	The error LED indicates an error if the internal logic of the card is not configured correctly or has a hardware failure.

9 Block Schematic

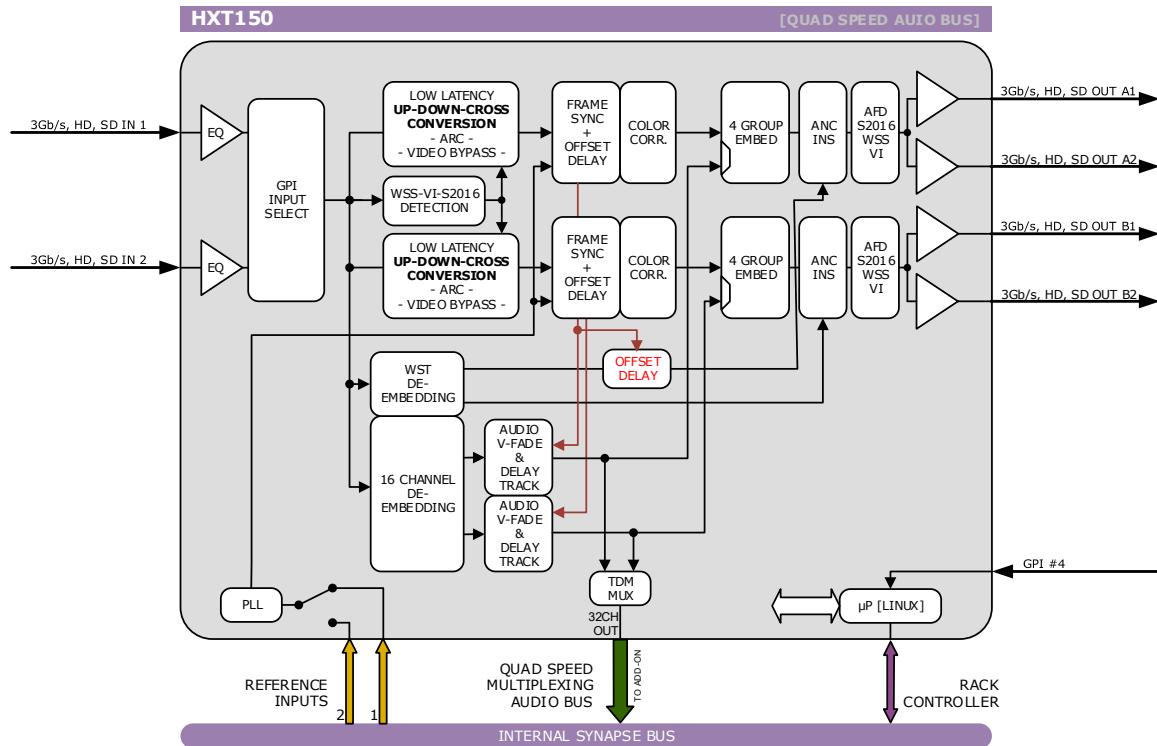


10 Connector Panels

The HXT150 can be used with the BPH17, the BHX17b (with bypass relay), the BPH19 or the BHX19. The following table displays the pinout of these backpanels.

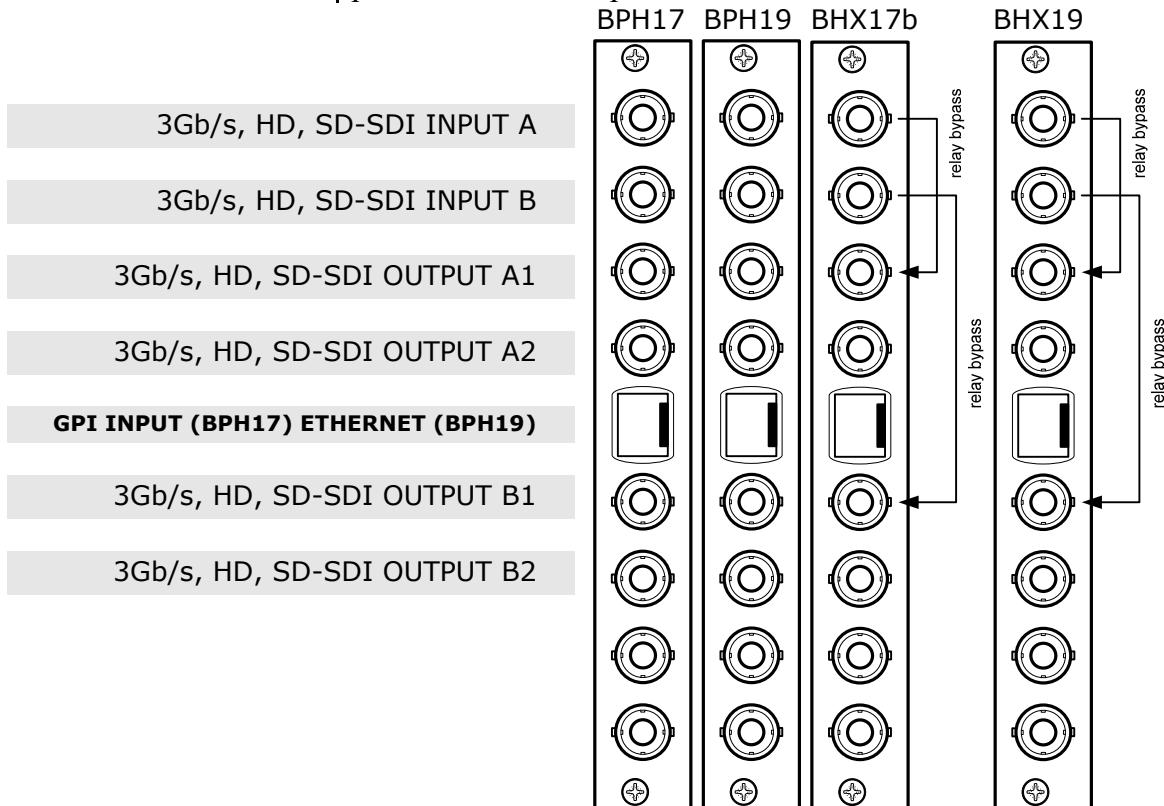

Unused inputs and outputs must be terminated with the correct impedance!

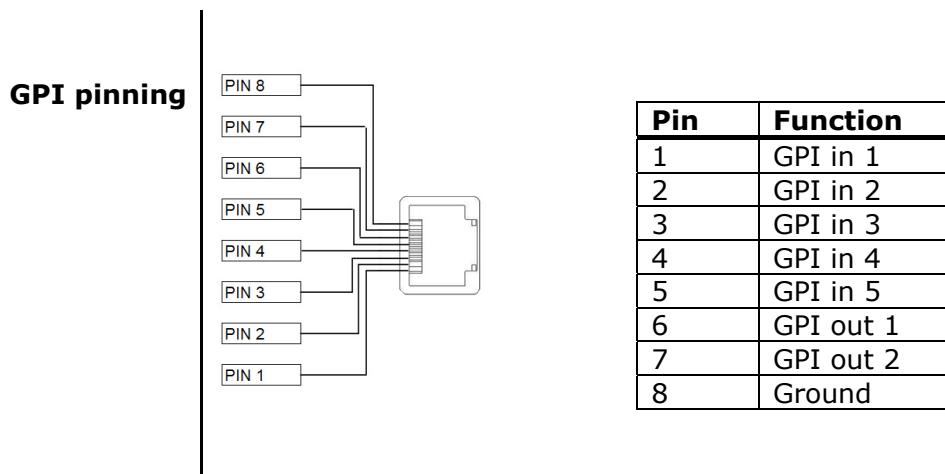

Appendix 1 GPI's explained

GPI pools	This card has 5 GPI contacts. Since there are several functions you can control by using GPI's (for instance: outmode and up/down/cross-presets and audio presets) you can add each individual GPI contact to certain GPI pools. Each pool can then be assigned to control a specific setting.																																																			
binary mode or priority mode	In the GPI_1 till GPI_5 settings you can appoint each GPI contact to one of the 3 available pools. The way these contacts act together depends on whether the pool works in binary or in priority mode.																																																			
Example 1	<p>If we would like to control the up converter presets using Pool A (Up_CtrlA set to GPI-A) and the outmode setting using Pool B (Out-mode-Ctrl set to GPI-B). Both pools working in priority mode. We could do the following:</p> <ul style="list-style-type: none"> ▪ Set GPI_1 to GPI Prio A ▪ Set GPI_2 to GPI Prio A ▪ Set GPI_3 to GPI Prio A ▪ Set GPI_4 to GPI Prio A ▪ Set GPI_5 to GPI Prio B <p>Pool A now consists of GPI 1, GPI 2, GPI 3 and GPI 4 in a priority mode, controlling the Up converter preset. Pool B consists only of GPI 5 (also in a priority mode), controlling the Output mode setting.</p> <p>Pool A now works as follows:</p> <table border="1"> <thead> <tr> <th>GPI_1 status</th> <th>GPI_2 status</th> <th>GPI_3 status</th> <th>GPI_4 status</th> <th>Set value</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>Up-conv Preset 1</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> <td>0</td> <td>Up-conv Preset 2</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> <td>0</td> <td>Up-conv Preset 3</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>0</td> <td>Up-conv Preset 4</td> </tr> <tr> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>Up-conv Preset 5</td> </tr> <tr> <td colspan="4"></td><td></td></tr> <tr> <td>0</td> <td>1</td> <td>1</td> <td>0</td> <td>Up-conv Preset 4 (because highest gets priority)</td> </tr> <tr> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>Up-conv Preset 5 (because highest gets priority)</td> </tr> </tbody> </table> <p>Pool B now works as follows:</p> <table border="1"> <thead> <tr> <th>GPI_5 status</th> <th>Set value</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>A out only</td> </tr> <tr> <td>1</td> <td>B out only</td> </tr> </tbody> </table>	GPI_1 status	GPI_2 status	GPI_3 status	GPI_4 status	Set value	0	0	0	0	Up-conv Preset 1	1	0	0	0	Up-conv Preset 2	0	1	0	0	Up-conv Preset 3	0	0	1	0	Up-conv Preset 4	0	0	0	1	Up-conv Preset 5						0	1	1	0	Up-conv Preset 4 (because highest gets priority)	1	1	1	1	Up-conv Preset 5 (because highest gets priority)	GPI_5 status	Set value	0	A out only	1	B out only
GPI_1 status	GPI_2 status	GPI_3 status	GPI_4 status	Set value																																																
0	0	0	0	Up-conv Preset 1																																																
1	0	0	0	Up-conv Preset 2																																																
0	1	0	0	Up-conv Preset 3																																																
0	0	1	0	Up-conv Preset 4																																																
0	0	0	1	Up-conv Preset 5																																																
0	1	1	0	Up-conv Preset 4 (because highest gets priority)																																																
1	1	1	1	Up-conv Preset 5 (because highest gets priority)																																																
GPI_5 status	Set value																																																			
0	A out only																																																			
1	B out only																																																			

Example 2

Let's say we would like to control the up-converter presets using Pool A (Up_CtrlA set to GPI-A) in binary mode and the audio presets using Pool B (Audio_Ctrl set to GPI-B) in priority mode. We could do the following:

- Set GPI_1 to GPI-A
- Set GPI_2 to GPI-A
- Set GPI_3 to Take A
- Set GPI_4 to GPI Prio B
- Set GPI_5 to GPI Prio B

Pool A now consists of GPI 1, GPI 2 and GPI 3 (as take), in a binary mode, controlling the Up converter preset. Pool B now consists of GPI 4 and GPI 5 in a priority mode, controlling the audio presets.

Pool A now works as follows:

GPI_1 status	GPI_2 status	Set value when GPI_3 (take) is closed
0	0	Up-conv Preset 1
1	0	Up-conv Preset 2
0	1	Up-conv Preset 3
1	1	Up-conv Preset 4

Pool B now works as follows:

GPI_4 status	GPI_5 status	Set value
0	0	Audio Preset 1
1	0	Audio Preset 2
0	1	Audio Preset 3
1	1	Audio Preset <u>3</u> (because highest gets priority)

Example 3

Let's say we would like to control the up-converter presets using Pool A (Up_CtrlA set to GPI-A) in priority mode, the audio presets using Pool B (Audio_Ctrl set to GPI-B) in priority mode, and Out mode control using Pool C (Out-mode-Ctrl set to GPI-C) also in prio mode. We could do the following settings:

- Set GPI_1 to GPI Prio A
- Set GPI_2 to GPI Prio A
- Set GPI_3 to GPI Prio B
- Set GPI_4 to GPI Prio B
- Set GPI_5 to GPI Prio C

Pool A now consists of GPI 1 and GPI 2 in a priority mode, controlling the Up converter preset. Pool B now consists of GPI 3 and GPI 4 in a priority mode, controlling the audio presets. Pool C consists only of GPI 5 (also in priority mode)

Pool A now works as follows:

GPI 1 status	GPI 2 status	Set value
0	0	Up-conv Preset 1
1	0	Up-conv Preset 2
0	1	Up-conv Preset 3
1	1	Up-conv Preset 3 (because highest gets priority)

Pool B now works as follows:

GPI 3 status	GPI 4 status	Set value
0	0	Audio Preset 1
1	0	Audio Preset 2
0	1	Audio Preset 3
1	1	Audio Preset 3 (because highest gets priority)

Pool C now works as follows:

GPI 5 status	Set value
0	A out only
1	B out only

Appendix 2 Quad speed ADD-ON bus

Scope

The internal audio ADD-ON bus needs an upgrade. We want more channels (32 per video stream seems possible in the near future). And we want the bus to be bidirectional, so 32 channels in and 32 channels out at the same time.

The new interface needs to be compatible with all existing hardware (frames) and in the implementation of the master card it needs to be backward compatible with the original ADD-ON bus.

The master card will have two modes:

- ▶ Normal ADD-ON mode
- or
- ▶ Quad Speed audio ADD-ON mode

These modes are selectable on the Master Card. If a mode is selected all ADD-ON cards to that Master need to be in the same mode.

You can mix Master-Cards in one frame using the two different modes, but all cards to the right of the master must be in the same mode as the master. A new Master breaks the chain and the Master Card ADD-ON mode can be selected again.

Features

The following features and rules will apply:

- Up to 32 channels output from the master card with looping to up to 3 ADD-ON cards
 - The ADD-ON card just picks the channels it wants to process
- Up to 32 channels input on the master card
 - If the master card can handle less than 32 channels, the lowest channel numbers will be used, as the ADD-ON card will always generate 32 channels (where some can be zero)
- Channel shuffling is done in the ADD-ON card
 - The Master Card has only one setting to enable the quad speed audio bus
- Every Quad-Speed ADD-ON card takes 32 channels from the ‘right hand ADD-ON card’ and adds (or overwrites) the local processed channels.
 - This can be done for any of the channels that are processed in the ADD-ON card
- Master Cards are switchable between normal and quad-speed bus
- Channel designations on the block schematics:
 - Channel 1-32 (or less) are injected into the dark green large arrow from Master Card to ADD-ON card and looped on to the next ADD-ON card via the dark green arrow
 - The ADD-ON card injects up to 32 channels into the brown large arrow
 - An ADD-ON card will also actively loop extra processed channels into the next ADD-ON card, and finally into the Master Card
- The cross looping of the original design is now a straight loop
- The quad speed bus can also work in one direction
 - You can use a Quad Speed audio bus to de-embed audio from the master and present on the ADD-ON card as AES/EBU, Bitstream (like Dolby) or analog audio
 - If applicable the ADD-ON card can also be used as an injection point of physical


Example

audio streams

The big difference between the new and old bus structure is the fact that it carries 4 times as much audio channels.

It is also bi directional by design. So half of the original physical infrastructure moves audio from the master card to the ADD-ON cards, and the other half is used to put the audio back

The following graphic shows how a typical quad speed bus chain works

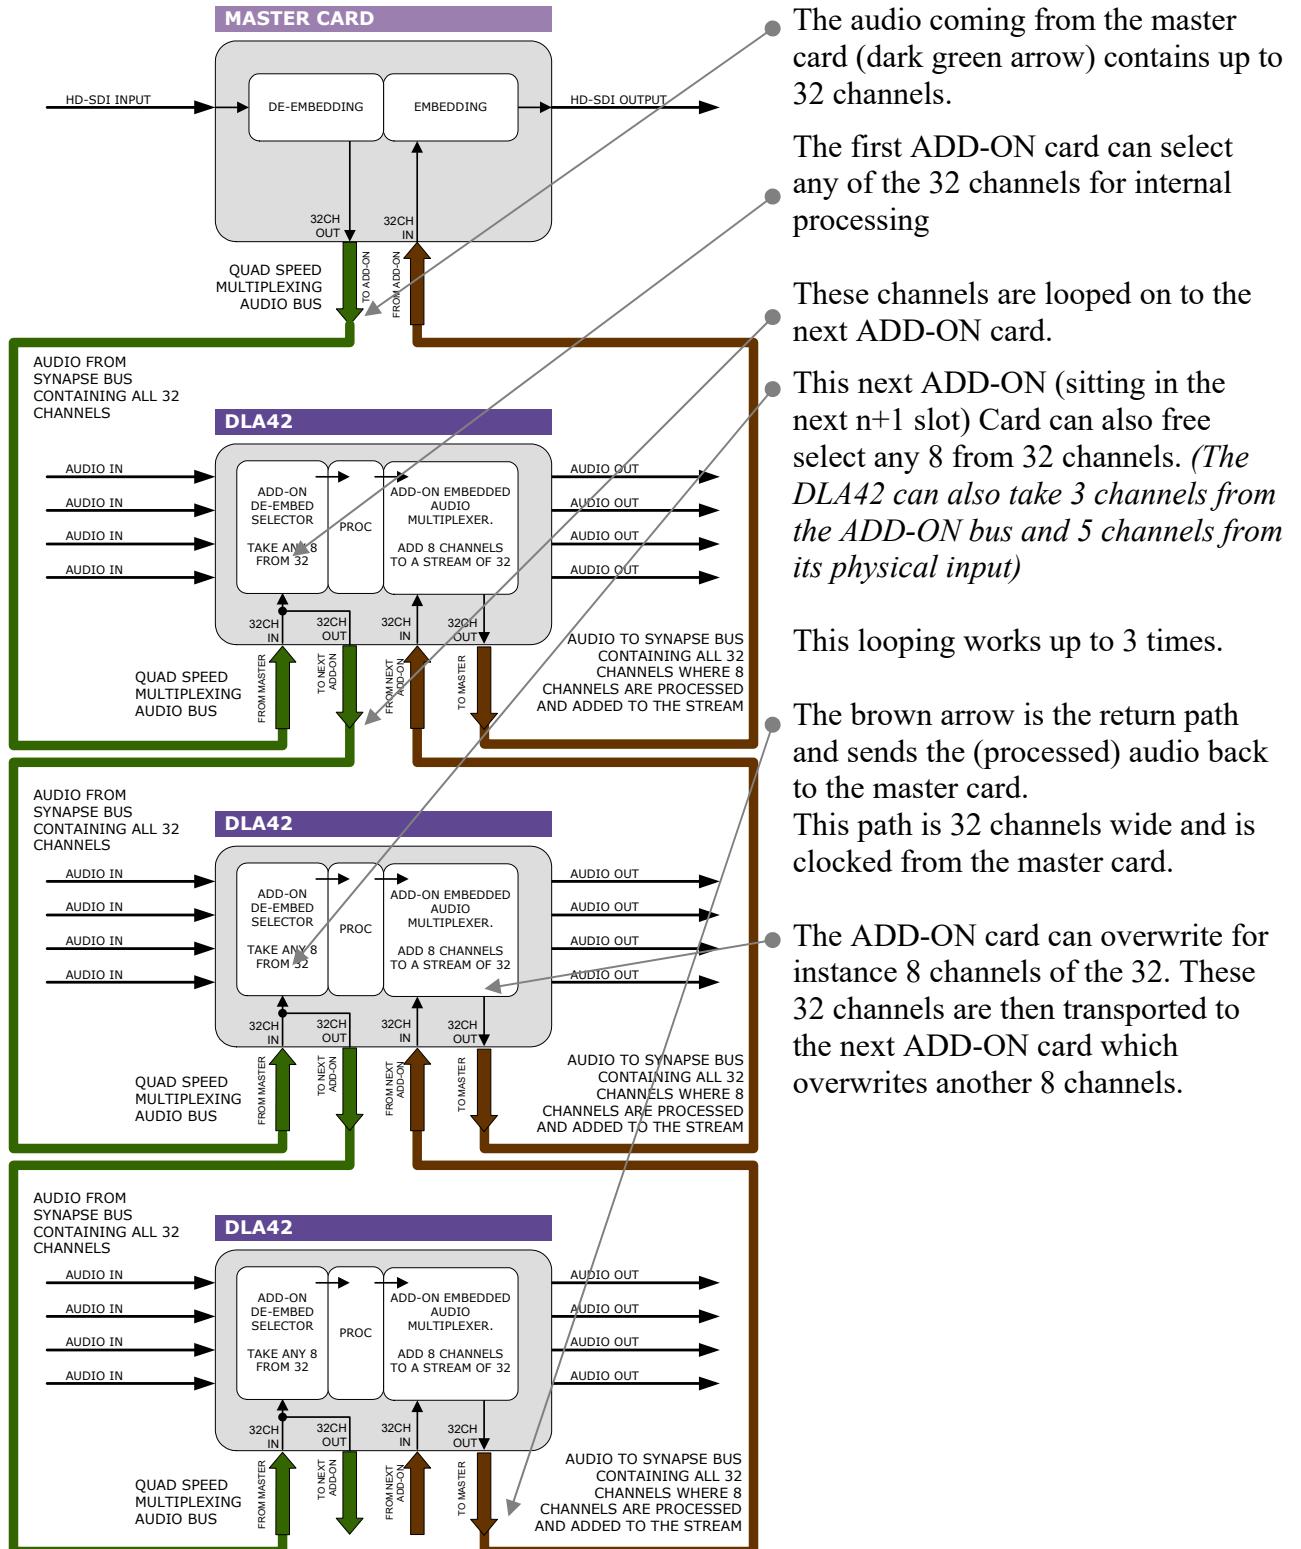


Multiplexing

The injection of processed audio into the master card works differently than you were used to with the original audio ADD-ON bus. The brown large arrow will always carry 32 channels from ADD-ON to ADD-ON, or from ADD-ON to Master Card. If the actual channels are used or which channels are used is determined in the ADD-ON card.


In the example below you can see a 4 Card system. One Master Card, and 3 Quad speed ADD-ON cards (the maximum). The last (most right) ADD-ON card processes 8 channels. They are inserted (a menu selection) in slot 17-24 from 32 channel-slots. The second ADD-ON card also processes 8 channels, but they are inserted in slot 9-16 (of 32 slots). The first ADD-ON card inserts channels 1 to 8

This method allows for overwriting slots that come from the right hand Master Card. Channel-slot 25 to 32 are left empty in this example.

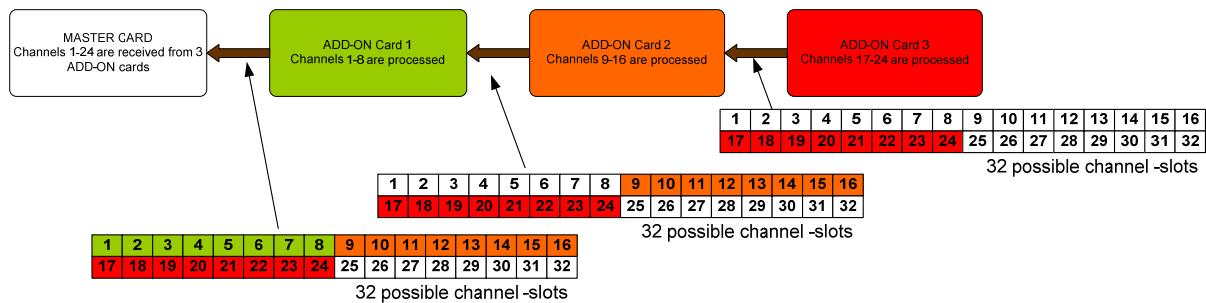

Note:

The top example shows a logical way of how the ADD-ON multiplexing could be performed. However; the insertion menu of for instance the DLA42 is much more flexible and allows putting every channel into any of the 32 channel-slots. The example below shows how the flexibility could be used.

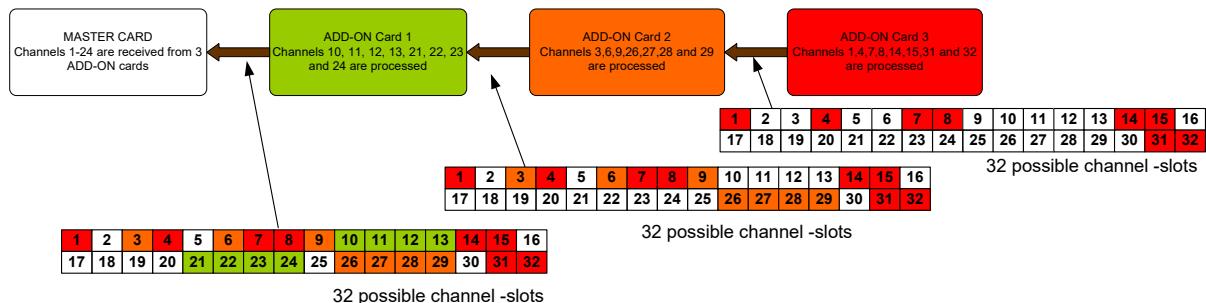

This product contains open-source software

This product contains open-source software licensed under the GNU Public License (GPL). A copy of the GNU Public License is included below. Under this license you are eligible to receive a copy of the source code of this software including any changes.

EVS Broadcast Equipment shall provide the source code on request either through physical distribution or electronic communication. For physical distribution you may be charged a fee that covers distribution costs. This offer is valid up to three years after date of purchase. Please direct your request to the support department of EVS Broadcast Equipment.

EVS Broadcast Equipment supports open-source software by participating in the development of open-source projects or submitting improvements to these projects. For more information see <ftp://opensource.axon.tv>.

GNU Public License version 2

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in objects code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.


10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation;

we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

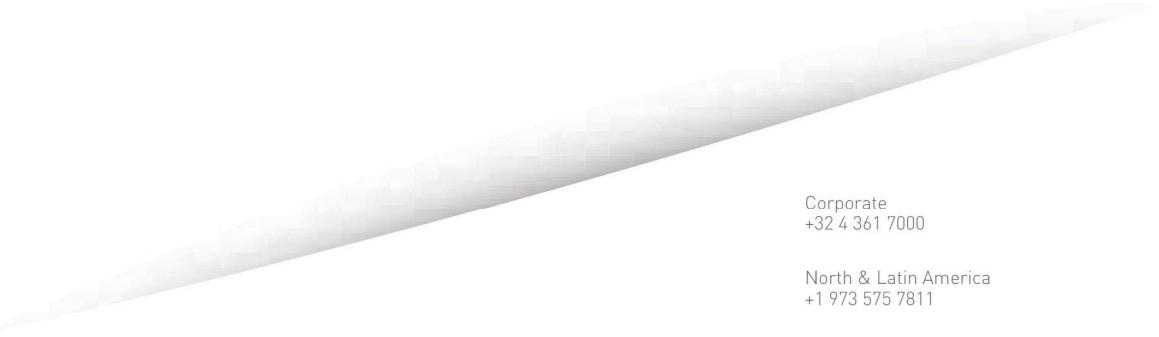

Corporate
+32 4 361 7000

North & Latin America
+1 973 575 7811

EVS Headquarters
Liège Science Park
13, rue Bois St Jean
B-4102 Seraing
Belgium

Asia & Pacific
+852 2914 2501

Other regional offices
www.evs.com/contact

EVS Broadcast Equipment is continuously adapting and improving its products in accordance with the ever changing requirements of the Broadcast Industry.
The data contained herein is therefore subject to change without prior notice. Companies and product names are trademarks or registered trademarks of their respective companies.



To learn more about EVS go to www.evs.com