




GDB500/550 **HDB500/550** **GDB900/950/990** **HDB900/950/990**

3Gb/s, HD, SD 4, 8 or 16 channel audio de-embedder
with 'TWINS' dual channel function

Installation and Operation manual

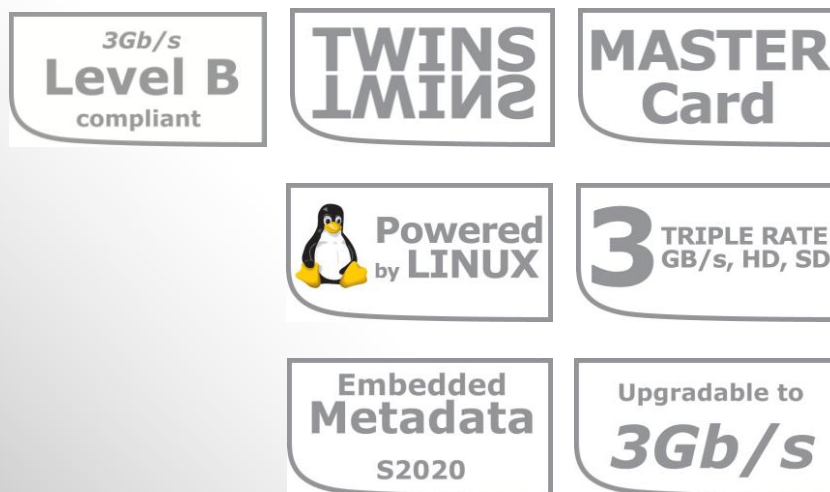

Committed.



Synapse

TECHNICAL MANUAL

GDB500/550/900/950/990
HDB500/550/900/950/990



**Lange Wagenstraat 55
NL-5126 BB Gilze
The Netherlands
Phone: +31 161 850 450
Fax: +31 161 850 499
E-mail: Info@axon.tv
Web: www.axon.tv**



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE

- ALWAYS disconnect your entire system from the AC mains before cleaning any component. The product frame (SFR18 or SFR04) must be terminated with three-conductor AC mains power cord that includes an earth ground connection. To prevent shock hazard, all three connections must always be used.
- NEVER use flammable or combustible chemicals for cleaning components.
- NEVER operate this product if any cover is removed.
- NEVER wet the inside of this product with any liquid.
- NEVER pour or spill liquids directly onto this unit.
- NEVER block airflow through ventilation slots.
- NEVER bypass any fuse.
- NEVER replace any fuse with a value or type other than those specified.
- NEVER attempt to repair this product. If a problem occurs, contact your local Axon distributor.
- NEVER expose this product to extremely high or low temperatures.
- NEVER operate this product in an explosive atmosphere.

Warranty: Axon warrants their products according to the warranty policy as described in the general terms. That means that Axon Digital Design BV can only warrant the products as long as the serial numbers are not removed.

Copyright © 2001 – 2012 AXON Digital Design B.V.

Date created: 03-12-2009

Date last revised: 21-08-2012

Axon, the Axon logo and Synapse are trademarks of Axon Digital Design B.V.

This product complies with the requirements of the product family standards for audio, video, audio-visual entertainment lighting control apparatus for professional use as mentioned below.



EN60950	Safety
EN55103-1: 1996	Emission
EN55103-2: 1996	Immunity

Axon Digital Design
GDB500/550/900/950/990
HDB500/550/900/950/990



Tested To Comply
With FCC Standards

FOR HOME OR OFFICE USE

This device complies with part 15 of the FCC Rules
Operation is subject to the following two conditions:
(1) This device may cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Table of Contents

Table of Contents	2
Introduction to Synapse	6
An Introduction to Synapse	6
Local Control Panel	6
Remote Control Capabilities	6
Unpacking and Placement	7
Unpacking	7
Placing the card	7
A Quick Start	8
When Powering-up	8
Changing settings and parameters	8
Front Panel Control	8
Example of changing parameters using front panel control	9
Axon Cortex Software	10
Menu Structure Example	10
The GDB990/950/900/550/500	11
Introduction	11
Features	11
Applications	12
Output options	12
Block schematic	12
Settings Menu	13
Introduction	13
Inp_Select	13
Switch-Back	13
Lock-Mode	13
Phaser1-Offset	13
Phaser2-Offset	13
F-delay1	13
V-delay1	14
H-delay1	14
F-delay2	14
V-delay2	14
H-delay2	14
Control	15
GPI-Ctrl	15
ExtMode	15
Active-Preset	15
Edit-Preset	15
PrstEditView	15
#Preset_Name	15
#Rail1	16
#Rail1	16
#SourceLocA1 ~ #SourceLocA4	16
#SourceLocA5 ~ #SourceLocA8	16
#LocOutA1 ~ #LocOutA4	16
#LocOutA5 ~ #LocOutA8	16
#SourceLocB1 ~ #SourceLocB4	17
#SourceLocB5 ~ #SourceLocB8	17
#LocOutB1 ~ #LocOutB4	17
#LocOutB5 ~ #LocOutB8	17
#LocGainOutA1 ~ #LocGainOutA4	17
#LocGainOutA5 ~ #LocGainOutA8	17
#LocGainOutB1 ~ #LocGainOutB4	17
#LocGainOutB5 ~ #LocGainOutB8	18
#LocPhaseOutA1 ~ #LocPhaseOutA4	18
#LocPhaseOutA5 ~ #LocPhaseOutA8	18
#LocPhaseOutB1 ~ #LocPhaseOutB4	18
#LocPhaseOutB5 ~ #LocPhaseOutB8	18
#LocDelayOutA1 ~ #LocDelayOutA4	18
#LocDelayOutA5 ~ #LocDelayOutA8	18
#LocDelayOutB1 ~ #LocDelayOutB4	18
#LocDelayOutB5 ~ #LocDelayOutB8	18
SourceAddonA1 ~ SourceAddonD4	19

AddonOutA1 ~ AddonOutD4	19
NonPCM-Bypass	19
OdBFS-OUT	19
Fade-Time	19
Audio-Phase	19
AudioStatusBits	20
S2020-Source	20
Extract_Line	20
Extract_Ass_Ch	20
Status Menu	21
Introduction	21
SDI-Input_1	21
SDI-Input_2	21
SDI-Map_1	21
SDI-Map_2	21
SDI-Freq_1	21
SDI-Freq_2	21
CRC-Stat_1	21
CRC-Stat_2	21
Ref-Format	22
Locked-To	22
Active-Out1	22
Active-Out2	22
GrpInUse-RI1	22
GrpInUse-RI2	22
ANC_RI1	22
ANC_RI2	22
LocStatOutA1 ~ LocStatOutA8	22
LocStatOutB1 ~ LocStatOutB8	23
LocFrmtOutA1/2	23
LocFrmtOutA3/4	23
LocFrmtOutA5/6	23
LocFrmtOutA7/8	23
LocFrmtOutB1/2	23
LocFrmtOutB3/4	23
LocFrmtOutB5/6	24
LocFrmtOutB7/8	24
AddOnStatOutA1 ~ AddOnStatOutD4	24
AddOnFrmtOutA1/2 ~ AddOnFrmtOutD3/4	24
S2020-Detect	24
S2020-Src_Line	24
S2020-Src_Ass_Ch	24
S2020-Src_Method	24
Progr_Config	24
FPGA-Stat	25
DM-A_Type	25
DM-A_Status	25
DM-B_Type	25
DM-B_Status	25
Events Menu	26
Introduction	26
What is the Goal of an event?	26
Events	26
Announcements	26
Input_1	26
Input_2	26
CRC-Status1	26
CRC-Status2	26
Ref-Status	26
What information is available in an event?	27
The Message String	27
The Tag	27
Defining Tags	27
The Priority	28
The Address	28
LED Indication	29
Error LED	29
Input_1 LED	29
Input_2 LED	29
ANC Data_1 LED	29
ANC Data_2 LED	29
Reference LED	29

Data Error_1 LED	29
Data Error_2 LED	29
Connection LED	29
Error LED	29
DM_Pres_A	29
DM_Pres_B	29
DM_Error_A	29
DM_Error_B	29
9 Block Schematic	30
Connector Panels	31
GPI pinning	31
D-sub pinning	32
GNU Public License version 2	33



1 Introduction to Synapse

An Introduction to Synapse

Synapse is a modular system designed for the broadcast industry. High density, intuitive operation and high quality processing are key features of this system. Synapse offers a full range of converters and processing modules. Please visit the AXON Digital Design Website at www.axon.tv to obtain the latest information on our new products and updates.

Local Control Panel

The local control panel gives access to all adjustable parameters and provides status information for any of the cards in the Synapse frame, including the Synapse rack controller. The local control panel is also used to back-up and restore card settings. Please refer to the RRC18, RRC10, RRC04, RRS18 and RRS04 manuals for a detailed description of the local control panel, the way to set-up remote control over IP and for frame related settings and status information.

Remote Control Capabilities

The remote control options are explained in the rack controller (RRC18/RRC10/RRC04/RRS18/RRS04) manual. The method of connection to a computer using Ethernet is described in the RRC/RRS manual.



CHECK-OUT: “AXON CORTEX” SOFTWARE WILL INCREASE SYSTEM FLEXIBILITY OF ONE OR MORE SYNAPSE FRAMES

Although not required to use Cortex with a Synapse frame, you are strongly advised to use a remote personal computer or laptop PC with Synapse Cortex installed, as this increases the ease of use and understanding of the modules.

2 Unpacking and Placement

Unpacking

The Axon Synapse card must be unpacked in an anti-static environment. Care must be taken NOT to touch components on the card – always handle the card carefully by the edges. The card must be stored and shipped in anti-static packaging. Ensuring that these precautions are followed will prevent premature failure from components mounted on the board.

Placing the card

The Synapse card can be placed vertically in an SFR18 frame or horizontally in an SFR04 and SFR08 frame. Locate the two guide slots to be used, slide in the mounted circuit board, and push it firmly to locate the connectors.

Correct insertion of card is essential as a card that is not located properly may show valid indicators, but does not function correctly.

NOTE: On power up all LED's will light for a few seconds, this is the time it takes to initialise the card.

3 A Quick Start

When Powering-up


On powering up the Synapse frame, the card set will use basic data and default initialisation settings. All LED's will light during this process. After initialisation, several LED's will remain lit – the exact number and configuration is dependant upon the number of inputs connected and the status of the inputs.

Changing settings and parameters

The front panel controls or the Axon Cortex can be used to change settings. An overview of the settings can be found in chapter 5, 6 and 7 of this manual.

Front Panel Control

Front Panel Display and Cursor

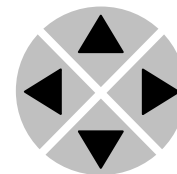

Settings are displayed and changed as follows;

Use the cursor 'arrows' on the front panel to select the menu and parameter to be displayed and/or changed.


- Press ► To go forward through the menu structure.
- Press ◀ To go back through the menu structure.
- Press ▲ To move up within a menu or increase the value of a parameter.
- Press ▼ To move down through a menu or decrease the value of a parameter.

NOTE: Whilst editing a setting, pressing ► twice will reset the value to its default.

**Example of
changing
parameters using
front panel control**

With the display as shown below

```
RRC18 [Select Card]
>S01=SFS10
```

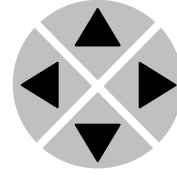

Pressing the ► selects the SFS10 in frame slot 01.

The display changes to indicate that the SFS10 has been selected. In this example the Settings menu item is indicated.

```
SFS10 [Select Menu]
>Settings
```



Pressing the ► selects the menu item shown, in this example Settings.

(Pressing ▲ or ▼ will change to a different menu eg Status, Events).

The display changes to indicate that the SFS10 Settings menu item SDI-Format has been selected and shows that its current setting is Auto.

```
SFS10 [Settings]
>SDI-Format=Auto
```




Pressing the ► selects the settings item shown, in this example SDI-Format.

(Pressing ▲ or ▼ will change to a different setting, eg Mode, H-Delay).

The display changes to indicate that the SFS10 Edit Setting menu item SDI-Format has been selected.

```
SFS10 Edit Setting]
SDI-Format>Auto
```

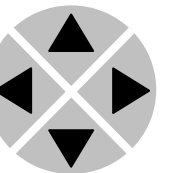

To edit the setting of the menu item press ▲ or ▼.

All menu items can be monitored and/or changed in this way. Changing a setting has an immediate effect.



Axon Cortex Software

Axon Cortex can be used to change the settings of Synapse modules from a PC, either locally or remotely. The software enables communication based on TCP/IP between the Setup PC and Synapse frames/modules.

Each Synapse frame is addressed through its rack controller's unique IP address, giving access to each module, its menus and adjustment items. Axon Cortex has access to data contained within the Synapse module and displays it on a GUI. The software has an intuitive structure following that of the module that it is controlling.

For operation of Axon Cortex, please refer to the Cortex manual.

Menu Structure Example

Slot	Module	Item	Parameter	Setting
▲				
▲				
S02		Identity		
▲				
S01	SFS10	▶ Set-tings	▶ Standard_dig	▶ Auto
▼		▼	▼	▼
S00	RRC18	Status	Mode	625
		▼	▼	▼
		Events	Ref-Input	525
			▼	
			H-Delay	
			▼	
			▼	

NOTE: Further information about Front Panel Control and Axon Cortex can be obtained from the RRC and RRS operational manuals and the Cortex help files.

4 The GDB990/950/900/550/500

Introduction

The GDB990-950-900-550-500 is a 3GB/s, HD SDI and SD SDI audio de-embedder. It is capable of extracting AES/EBU digital audio channels or analog audio channels. The card has 2 option output boards: 4 mono analog audio outputs (4ch total) per board, or 4 stereo AES/EBU outputs (8ch total) per board.

The core consists of four de-embedder-blocks DeEmb_A, DeEmb_B, DeEmb_C and DeEmb_D. In front of these de-embedders are SDI channel selection muxes which allow for individual de-embedding out of the two SDI inputs. The delay blocks can be used in series for a single SDI 4 group de-embedder with up to 1 sec of video offset delay, or in parallel for 2 individual channels with each 2 group de-embedders and individual 500ms offset delay in a fully separate channel TWINS function. Each block is capable of de-embedding 4 audio selectable out of 16 channels from each input. The TWINS mode is a single command operation and controls 2 individual selection switches as can be seen in the block diagram.

In addition, four ADD-ON cards can be connected to create a routing matrix. The architecture of DeEmb_A to DeEmb_D blocks is identical. The local AES/EBU or analog outputs can be controlled to adjust Phase, Gain and delay (on the fly).

Future upgrades are possible, like for instance the HDB900 can be future upgraded to HDB990, GDB900 or GDB990. This allows for staged implementation of HD infrastructures and spread the cost over multiple budget years.

Features

- Dual (TWINS*) or single channel SDI mode
- 8 (4) AES/EBU outputs (available with 110 Ohm and 75 Ohm connectors)
- 4 analog outputs (GDB/HDB950 only)
- 8 extra AES/EBU inputs through the Synapse bus
- 2 SDI inputs (with auto switch on carrier loss and switch back function)
- 2 SDI + embedded audio outputs
- Pre and post delay de-embedding
- 7 presets that configure all 16 output channels at once. controlled by GPI or ACP (Cortex)
- Audio level and phase control
- Audio offset delay up to 5000 ms
- Video offset delay up to one second (or 2x 500ms)
- 16 extra audio channels (4 groups) with ADD-ON card for additional audio outputs
- Peak detection at 0 dBFS
- Transparent for ATC time code RP188, RP196, RP215
- Locks to Tri-level, Bi-level syncs and SDI input
- Full control and status monitoring through the front panel of the SFR04/SFR08/SFR18 frame and the Ethernet port (ACP)
- Optional 1 or 2 fiber inputs, 1 or 2 fiber outputs or a fiber in and output (replacing 1 SDI in and output) on the I/O panel
- Optional relay bypass (BHX18 or BHX18D)

* (In dual mode, or 2-SDI shuffle mode the sources need to be running on the same clock, the phase is not critical)

Applications


- 3Gb/s, HD and SD audio de-embedding
- Preset based 16 channel audio de-embedding
- High density studio de-embedding functions where minimal space is required (36 3Gb/s SDI de-embedders in 4RU)
- On the fly audio routing from two SD, HD and 3Gb/s SDI video streams.
- Fiber I/O embedding with an optical and electrical switchable input and a simultaneous powered optical and electrical SDI output.

Output options

This platform has 2 option boards which define the outputs of the card. Refer to the block schematic for the position of the option boards. These are the options:

Card model	Option board 1	Option board 2
GDB990	4 AES/EBU outputs (8 channels)	4 AES/EBU outputs (8 channels)
HDB990	4 AES/EBU outputs (8 channels)	4 AES/EBU outputs (8 channels)
GDB950	4 AES/EBU outputs (8 channels)	4 analog outputs (4 channels)
HDB950	4 AES/EBU outputs (8 channels)	4 analog outputs (4 channels)
GDB900	4 AES/EBU outputs (8 channels)	None
HDB900	4 AES/EBU outputs (8 channels)	None
GDB550	4 analog outputs (4 channels)	4 analog outputs (4 channels)
HDB550	4 analog outputs (4 channels)	4 analog outputs (4 channels)
GDB500	4 analog outputs (4 channels)	None
HDB500	4 analog outputs (4 channels)	None

Block schematic

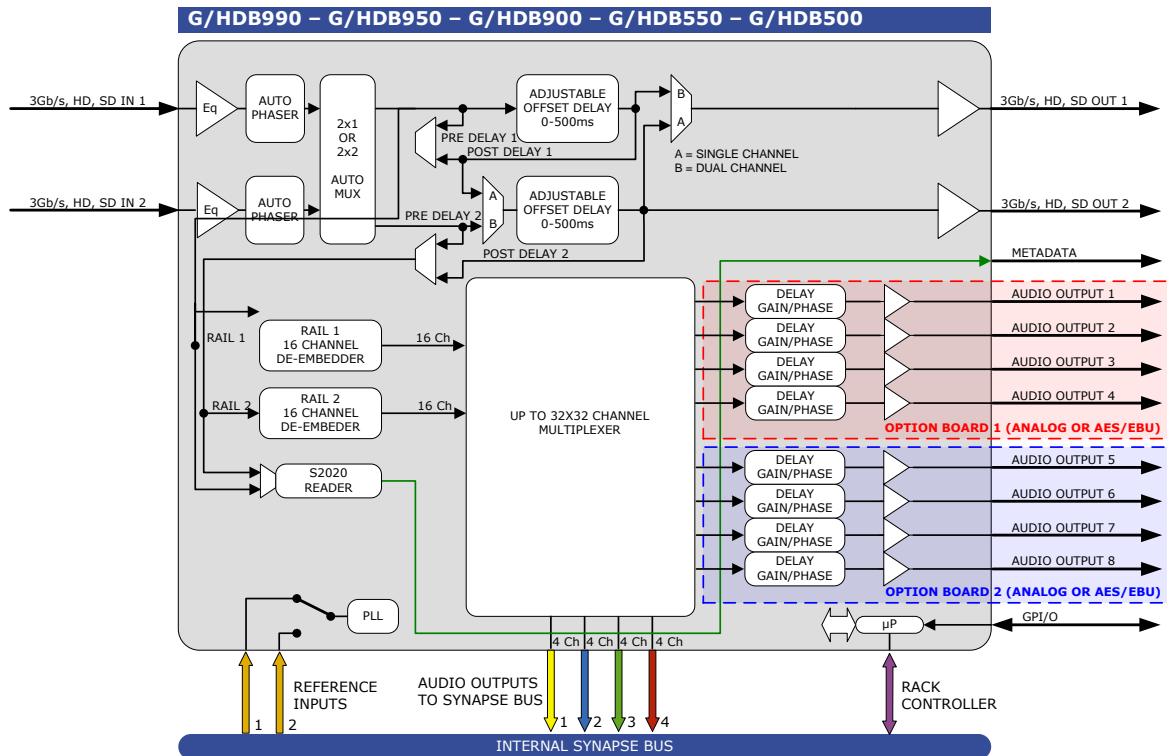

5 Settings Menu

Introduction

The settings menu displays the current state of each GDB-HDB setting and allows you to change or adjust it. Settings can be changed using the front panel of the Synapse frame (SFR18, SFR08 or SFR04) or with Cortex. Also the SCP08 control can be used. Please refer to chapter 3 for information on the Synapse front panel control and Cortex.

Note: All items preceded with a #-sign are part of the presets.

VIDEO

Inp_Select

With this item you can decide which of the 2 inputs is used and how the card will switch between the 2 inputs. Choices are:

- **Auto:** The card chooses input 1 if there is a source. If there is no input 1, the card will automatically switch to input 2.
- **TWINS:** The card will process both input 1 as well as input 2 as separate processed circuits.
- **SDI-1:** only input 1 is used (Detection of SDI2 is disabled)
- **SDI-2:** only input 2 is used (Detection of SDI1 is disabled)

Switch-Back

With **Inp_Select** set to **Auto**, the card will automatically switch to the other input when the first input was lost. With **Switch-Back** set to **On**, the card will switch back to the first input if this it is back up again. Set to **Off** the card will keep using the other input even if the first input is back up again.

Lock-Mode

Lock-Mode determines whether the card is locked to input 1 (SDI1), input 2 (SDI2) or to the reference (Ref1 or Ref2). Can also be set to **Auto-SDI**, automatically selecting the currently active SDI input to lock to. By default it is set to **SDI1**.

Phaser1-Offset

Sets the offset of the auto phaser of input 1 (see block schematic) between 0 and 4124px. Default is 0px.

Phaser2-Offset

Sets the offset of the auto phaser of input 2 (see block schematic) between 0 and 4124px. Default is 0px.

F-delay1

F-Delay1 sets the amount of delayed Frames for output 1. The available range is from 0 to 125 fields (dependant on the I/O). Default is 0F.

V-delay1

V-Delay1 setting allows adjustment of the vertical phase of the output signal for output 1 with respect to the selected reference input.

The V-Delay setting gives a delay in addition to the reference timing. For example: if the V-Delay is set to 10 TV HD lines, the output signal will be delayed by reference timing + 10 TV HD lines. The signal is delayed (advanced) with respect to the phase of the reference signal. The available range is from 0 to a maximum of 1124 lines (dependant on I/O format). The default setting is 0ln.

H-delay1

The H-Delay1 setting allows adjustment of the Horizontal phase of the output signal for output 1 with respect to the selected reference input.

The H-Delay setting gives a delay in addition to the reference timing. For example: if the H-Delay is set to 10 pixels, the output signal will be delayed by reference timing + 10 pixels. The signal is delayed (advanced) with respect to the phase of the reference signal. The available range is from 0 to a maximum of 4124 pixels (dependant on I/O format). The default setting is 0px.

F-delay2

F-Delay2 sets the amount of delayed Frames for output 2. The available range is from 0 to 125 fields (dependant on the I/O). Default is 0F.

V-delay2

V-Delay2 setting allows adjustment of the vertical phase of the output signal for output 2 with respect to the selected reference input.

The V-Delay setting gives a delay in addition to the reference timing. For example: if the V-Delay is set to 10 TV HD lines, the output signal will be delayed by reference timing + 10 TV HD lines. The signal is delayed (advanced) with respect to the phase of the reference signal. The available range is from 0 to a maximum of 1124 lines (dependant on I/O format). The default setting is 0ln.

H-delay2

The H-Delay2 setting allows adjustment of the Horizontal phase of the output signal for output 2 with respect to the selected reference input.

The H-Delay setting gives a delay in addition to the reference timing. For example: if the H-Delay is set to 10 pixels, the output signal will be delayed by reference timing + 10 pixels. The signal is delayed (advanced) with respect to the phase of the reference signal. The available range is from 0 to a maximum of 4124 pixels (dependant on I/O format). The default setting is 0px.

	PRESET
Control	With this setting you decide whether the presets are controlled manually (using cortex of the front controls of the frame), or by use of the GPI inputs.
GPI-Ctrl	<p>The GDB/HDB500/550/900/950/990 has several physical GPI contacts to control the card's presets (if presets are set to be GPI controlled)</p> <p>Latch: Latching GPI mode. When a contact is closed momentarily (edge triggered).</p> <p>Non-Latch: Non-latching GPI mode. When a contact is closed all the time (level triggered).</p>
ExtMode	With this item you set the purpose of pins 5 till 8 of the RJ45 connector on the backpanel. The pupose can be either additional GPIO contacts (resulting in 7 GPI contacts instead of 3) or to use those pins for a dolby metadata input. Default is GPIO.
Active-Preset	With this item you can manually change the currently active preset . Can be any preset between 1 and 7. By default it is set to 1. All menu settings that are preceded with a '#'-prefix are part of the preset.
Edit-Preset	Here you can select which of the 7 selectable presets you want to edit. Changing this will not change the active preset, unless the currently active preset is the same you are going to edit. All menu settings that are preceded with a '#'-prefix are part of the preset.
PrstEditView	With this setting set to Follow Active, the edit preset settings will follow the active preset when the active preset is changed. This to avoid confusion when changing the active. Set to Independent the edit preset will not automatically follow active preset changes. By default set to Follow Active.
#Preset_Name	Sets/displays the name of the currently displayed preset.

DE-EMBEDDING	
#Rail1	The audio on rail 1 (see block schematic) can be forwarded to the (de)embedding blocks before (pre-delay) or after (post-delay) the video-delay processing blocks. Default is pre-delay.
#Rail1	The audio on rail 2 (see block schematic) can also be forwarded to the (de)embedding blocks before (pre-delay) or after (post-delay) the video-delay processing blocks. Default is pre-delay.
LOCAL AUDIO OUT	
#SourceLocA1 ~ #SourceLocA4	These settings let you decide what the source should be for audio of outputs A1 till A4 (AES/EBU outputs 1 and 2 in case of the 900/950/990 models and analog outputs 1 till 4 in case of the 500/550 models). Audio can come from Rail1 or Rail2 (see block schematic).
#SourceLocA5 ~ #SourceLocA8	Only available in GDB/HDB 900/950/990. These settings let you decide what the source should be for audio of outputs A5 till A8 (AES/EBU outputs 3 and 4 in case of the 900/950/990 models). Audio can come from Rail1 or Rail2 (see block schematic).
#LocOutA1 ~ #LocOutA4	With these settings you can select one of the available embedded 16 channels of the above chosen rail input which should de-embedded to the corresponding output channel. A1 till A4 indicate AES/EBU outputs 1 and 2 in case of the 900/950/990 models and analog outputs 1 till 4 in case of the 500/550 models. Can also be set to off, resulting in no audio on the corresponding output channel.
#LocOutA5 ~ #LocOutA8	Only available in the GDB/HDB 900/950/990 models. With these settings you can select one of the available embedded 16 channels of the above chosen rail input which should de-embedded to the corresponding output channel. A5 till A8 indicate AES/EBU outputs 3 and 4 of the 900/950/990 models. Can also be set to off, resulting in no audio on the corresponding output channel.

**#SourceLocB1 ~
#SourceLocB4**

Only available in the GDB/HDB 550, 950 and 990 models. These settings let you decide what the source should be for audio of outputs B1 till B4 (AES/EBU outputs 5 and 6 in case of the 990 models, analog outputs 1 till 4 in case of the 950 models and analog outputs 5 till 8 in case of the 550 model). Audio can come from Rail1 or Rail2 (see block schematic).

**#SourceLocB5 ~
#SourceLocB8**

Only available in the GDB/HDB 990 models. These settings let you decide what the source should be for audio of outputs B5 till B8 (AES/EBU outputs 7 and 8 of the 990. Audio can come from Rail1 or Rail2 (see block schematic).

**#LocOutB1 ~
#LocOutB4**

Only available in the GDB/HDB 550/950/990 models. With these settings you can select one of the available embedded 16 channels of the above chosen rail input which should de-embedded to the corresponding output channel. B1 till B4 indicate AES/EBU outputs 5 and 6 of the 990 models, analog outputs 1 till 4 of the 950 models and analog outputs 5 till 8 of the 550 models. Can also be set to off, resulting in no audio on the corresponding output channel.

**#LocOutB5 ~
#LocOutB8**

Only available in the GDB/HDB 990 models. With these settings you can select one of the available embedded 16 channels of the above chosen rail input which should de-embedded to the corresponding output channel. B5 till B8 indicate AES/EBU outputs 7 and 8 of the 990 models. Can also be set to off, resulting in no audio on the corresponding output channel.

**#LocGainOutA1 ~
#LocGainOutA4**

Adjusts the gain for the corresponding audio output (Analog outputs 1 till 4 in case of the 500/550 models; AES/EBU outputs 1 and 2 in case of the 900/950/990 models) between -144 and 12dB. -144dB means the audio will be muted.

**#LocGainOutA5 ~
#LocGainOutA8**

Only available in GDB/HDB 900/990 models. Adjusts the gain for the corresponding audio output (AES/EBU outputs 3 and 4 in case of de 900/950/990 models) between -144 and 12dB. -144dB means the audio will be muted.

**#LocGainOutB1 ~
#LocGainOutB4**

Only available in GDB/HDB 550/950/990 models. Adjusts the gain for the corresponding audio output (Analog outputs 5 till 8 in case of the 550 model; Analog outputs 1 till 4 in case of the 950 models; AES/EBU outputs 5 and 6 in case of the 990 model) between -144 and 12dB. -144dB means the audio will be muted.

#LocGainOutB5 ~ #LocGainOutB8	Only available in GDB/HDB 990 models. Adjusts the gain for the corresponding audio output (AES/EBU outputs 7 and 8) between -144 and 12dB. -144dB means the audio will be muted.
#LocPhaseOutA1 ~ #LocPhaseOutA4	Adjusts the audio phase of the corresponding individual output (Analog outputs 1 till 4 in case of the 500/550 models, AES/EBU outputs 1 and 2 in case of the 900/950/990 models) to 0 deg or 180 deg.
#LocPhaseOutA5 ~ #LocPhaseOutA8	Only available in GDB/HDB 900/950/990 models. Adjusts the audio phase of the corresponding individual output (AES/EBU outputs 3 and 4) to 0 deg or 180 deg.
#LocPhaseOutB1 ~ #LocPhaseOutB4	Only available in GDB/HDB 550/950/990 models. Adjusts the audio phase of the corresponding individual output (Analog outputs 5 till 8 in case of the 550 model; analog outputs 1 till 4 in case of the 950 models; AES/EBU outputs 5 and 6 in case of the 990 model) to 0 deg or 180 deg.
#LocPhaseOutB5 ~ #LocPhaseOutB8	Only available in GDB/HDB 990 models. Adjusts the audio phase of the corresponding individual output (AES/EBU outputs 7 and 8) to 0 deg or 180 deg.
#LocDelayOutA1 ~ #LocDelayOutA4	Adjusts the delay of the corresponding audio channel (Analog outputs 1 till 4 in case of the 500/550 models, AES/EBU outputs 1 and 2 in case of the 900/950/990 models) between 0 and 5000ms.
#LocDelayOutA5 ~ #LocDelayOutA8	Only available in GDB/HDB 900/950/990 models. Adjusts the delay of the corresponding audio (AES/EBU outputs 3 and 4) between 0 and 5000ms.
#LocDelayOutB1 ~ #LocDelayOutB4	Only available in GDB/HDB 550/950/990 models. Adjusts the delay of the corresponding audio channel (Analog outputs 5 till 8 in case of the 550 model; Analog outputs 1 till 4 in case of the 950 models; AES/EBU outputs 5 and 6 in case of the 990 model) between 0 and 5000ms.
#LocDelayOutB5 ~ #LocDelayOutB8	Only available in GDB/HDB 990 models. Adjusts the delay of the corresponding audio channel (AES/EBU output 7 and 8) between 0 and 5000ms.

ADDON AUDIO OUT	
SourceAddonA1 ~ SourceAddonD4	These settings let you decide what the source should be for audio of outputs A1 till D4 to the add-on bus. Audio can come from Rail1 or Rail2 (see block schematic).
AddonOutA1 ~ AddonOutD4	With these settings you can select one of the available embedded 16 channels of the above chosen rail input which should de-embedded to the corresponding add-on bus output channel. Can also be set to off, resulting in no audio on the corresponding output channel.
MISC	
NonPCM-Bypass	With this setting you can switch to bypass audio processing for all non-PCM audio on or off.
0dBFS-OUT	The setting 0dBFS-Out sets the analog audio output level for a digital full-scale output signal. The available settings are +12 dBu, +15dBu, +18dBu and 24dBu.
Fade-Time	Fade/time is locked to 2 parameters: channel-switch and gain-change. It is used as the fade-in/out time of the channel-switch of audio channels. The old channel will be fade-out and the new channel will be fade in according to the time chosen with fade-time. Fade-Time is also used for smooth transitions when gain-values are changed. These smooth transitions are triggered by a change in Gain settings or a Preset change. With this setting you can manually set this fade time between 100ms and 10.000ms. The default is 500ms.
Audio-Phase	<p>If this setting is set to <i>Align</i>, the card ensures audio-phase alignment between multiple audio channels and audio groups, which is necessary for multi-channel (surround) purposes. If errors in the signal-chain occur the de-embedder blocks reset synchronously to maintain audio-phase-alignment.</p> <p>If this setting is set to <i>Off</i>, the card <i>eats-all</i> audio including errors. Even if there are DBN/ANC/ECC or channel-sequence errors, the de-embedder will pass them. Be aware that audio-phase-alignment between multiple audio channels and audio groups can not be maintained if this setting is set to <i>Off</i>.</p> <p>Note: This setting can be helpful to solve problems in the field using equipment which doesn't follow the standards correctly.</p>

AudioStatusBits

With this setting you select whether the audio status bits should be `Transparent` (same status bit on the outputs as on the inputs) or to overwrite them with new status bits.

METADATA**S2020-Source**

With this setting you select whether metadata should come from input 1 (`Rail1`) input 2 (`Rail2`) or if it is coming from the `Local RJ45` input (requires the setting `ExtMode` to be set to `Metadata`). Default is `Rail1`.

Extract_Line

With this item you can fix metadata extraction from a line a line between line 0 and line 1125 from where you want to extract the metadata from the input when `S2020-Source` is set to `Rail1` or `Rail2`. By default set to line 0. Set to line 0 = automatic extraction from the last available line.

Extract_Ass_Ch

One attribute of the S2020 metadata is the association channel. The association channel is the channel to which the metadata is connected. You can select the S2020 metadata to be extracted from one of the possible associated channel pairs ranging from `Ch01/02` to `Ch15/16`. Can also be set to `None` (in case there is no association set in the S2020 source or to `Auto` (in which case the S2020 is extracted from the first available associated channel).

6 Status Menu

Introduction	The status menu indicates the current status of each item listed below.
SDI-Input_1	<p>This status item indicates the presence and format of a valid signal in input 1. This is displayed as:</p> <ul style="list-style-type: none"> ▪ 1080P59.94 ▪ 1080p50 ▪ 1080i59.94 ▪ 1080i50 ▪ 1080p30 ▪ 1080p25 ▪ 1080p24 ▪ 720p59.94 ▪ 720p50 ▪ SD525 ▪ SD625 ▪ NA
SDI-Input_2	This status item indicates the presence and format of a valid signal in input 2. This is displayed as listed under SDI-Input1.
SDI-Map_1	Displays whether the 3Gb/s input on input 1 is mapped as Level A or Level B. If the input is not 3Gb/s (1080p50 or 1080p60) this item indicates NA.
SDI-Map_2	Displays whether the 3Gb/s input on input 2 is mapped as Level A or Level B. If the input is not 3Gb/s (1080p50 or 1080p60) this item indicates NA.
SDI-Freq_1	Indicates the frequency of SDI input 1. Can be 1:1, 1:1.001 or NA.
SDI-Freq_2	Indicates the frequency of SDI input 2. Can be 1:1, 1:1.001 or NA.
CRC-Stat_1	Displays if there are CRC errors on input 1.
CRC-Stat_2	Displays if there are CRC errors on input 2.

Ref-Format	<p>Displays the reference format. Can be one of the following:</p> <ul style="list-style-type: none"> ■ NA ■ NTSC/480i ■ PAL/576i ■ 480p ■ 576p ■ 720p ■ 1080i ■ 1080p
Locked-To	<p>Displays to what the card is locked: Ref, SDI1, SDI2 or Not Locked.</p>
Active-Out1	<p>Indicates what the current source is of output 1, can be SDI1 or SDI2.</p>
Active-Out2	<p>Indicates what the current source is of output 2, can be SDI1 or SDI2.</p>
GrpInUse-RI1	<p>Displays which groups are in use in rail 1 (see block schematic). Displayed as for instance 1_3_ when groups 1 and 3 contain audio and for instance _234 when groups 2, 3 and 4 contain audio.</p>
GrpInUse-RI2	<p>Displays which groups are in use in rail 2 (see block schematic). Displayed as for instance 1_3_ when groups 1 and 3 contain audio and for instance _234 when groups 2, 3 and 4 contain audio.</p>
ANC_RI1	<p>Shows the status of the ancillary data in rail 1. Can be NA, OK or error.</p>
ANC_RI2	<p>Shows the status of the ancillary data in rail 2. Can be NA, OK or error.</p>
LocStatOutA1 ~ LocStatOutA8	<p>Display the status of the individual audio channels of outputs 1 till 4. Can be OK, NA or Clipped (meaning the audio is clipping)</p>

LocStatOutB1 ~ LocStatOutB8	Display the status of the individual audio channels of outputs 5 till 8. Can be OK, NA or Clipped (meaning the audio is clipping). This is only available for the GDB/HDB 550/990 models.
LocFrmtOutA1/2	<p>Displays the format of outputs 1 and 2 in case of a 500/550 and output 1 in case of a 900/990. Can be one of the following:</p> <ul style="list-style-type: none"> ■ NA ■ PCM ■ Null ■ AC-3 ■ TimeStmp ■ MPEG-1 ■ MPEG-2 ■ SMPTE-KLV ■ Dolby E ■ Caption data ■ UserDef ■ Rsvd
LocFrmtOutA3/4	Displays the format of outputs 3 and 4 in case of a 500/550 and output 2 in case of a 900/990. Can be one of the formats listed under LocFrmtOutA1/2.
LocFrmtOutA5/6	Displays the format of output 3 in case of a 900/990. Can be one of the formats listed under LocFrmtOutA1/2. Only available in 900/990 models
LocFrmtOutA7/8	Displays the format of output 4 in case of a 900/990. Can be one of the formats listed under LocFrmtOutA1/2. Only available in 900/990 models
LocFrmtOutB1/2	Displays the format of outputs 5 and 6 in case of a 550 and output 5 in case of a 990. Can be one of the formats listed under LocFrmtOutA1/2. This status is only available in the 550 and 990 models.
LocFrmtOutB3/4	Displays the format of outputs 7 and 8 in case of a 550 and output 6 in case of a 990. Can be one of the formats listed under LocFrmtOutA1/2. This status is only available in the 550 and 990 models.

LocFrmtOutB5/6	Displays the format of output 7 in case of a 990. Can be one of the formats listed under LocFrmtOutA1/2. This status is only available in the 990 models.
LocFrmtOutB7/8	Displays the format of output 8 in case of a 990. Can be one of the formats listed under LocFrmtOutA1/2. This status is only available in the 990 models.
AddOnStatOutA1 ~ AddOnStatOutD4	Display the status of each individual add-on buss audio output channel. Can be OK, NA or Clipped (meaning the audio is clipping).
AddOnFrmtOutA1/2 ~ AddOnFrmtOutD3/4	Display the format of each add-on buss audio output channel pair. Can be one of the formats listed under LocFrmtInA1/2.
S2020-Detect	This status indicates whether or not S2020 is present or not (NA or Error). Depends on the S2020 source setting in the settings menu.
S2020-Src_Line	This status indicates in what line the source S2020 metadata was detected.
S2020-Src_Ass_Ch	Indicates the value of the Associated Channel item in the currently present S2020 signal.
S2020-Src_Method	Indicates the insert method of the currently present S2020 signal.
Progr_Config	<p>This status indicates the program config as present on the current S2020 source. Can be one of the following values:</p> <ul style="list-style-type: none"> ■ 5.1+2 ■ 5.1+1+1 ■ 4+4 ■ 4x2 ■ 8x1 ■ 5.1 ■ 3x2 ■ 6x1 ■ 2+2 ■ 7.1 ■ Other ■ NA

FPGA-Stat	Displays the status of the FPGA chip. Can be error or OK.
DM-A_Type	Displays which type of input or output board is currently detected on circuit A. Can be Digital input or output, Analog input or output or NA. For the GDB/HDB900/990 this should always be Digital output.
DM-A_Status	Indicates the status of I/O board A, can be OK, NA or Error.
DM-B_Type	Displays which type of input or output board is currently detected on circuit B. Can be Digital input or output, Analog input or output or NA. For the GDB/HDB990 this should always be Digital output. For the GDB/HDB900 this should always be NA.
DM-B_Status	Indicates the status of I/O board B, can be OK, NA or Error.

7 Events Menu

Introduction	An event is a special message that is generated on the card asynchronously. This means that it is not the response to a request to the card, but a spontaneous message.
What is the Goal of an event?	The goal of events is to inform the environment about a changing condition on the card. A message may be broadcast to mark the change in status. The message is volatile and cannot be retrieved from the system after it has been broadcast. There are several means by which the message can be filtered.
Events	The events reported by the card are as follows;
Announcements	<code>Announcements</code> is not an event. This item is only used for switching the announcement of status changes on/off. 0=off, other =on
Input_1	<code>Input_1</code> can be selected between 0 .. 255. 0= no event, 1..255 is the priority setting.
Input_2	<code>Input_2</code> can be selected between 0 .. 255. 0= no event, 1..255 is the priority setting.
CRC-Status1	<code>CRC-Status1</code> can be selected between 0 .. 255. 0= no event, 1..255 is the priority setting.
CRC-Status2	<code>CRC-Status2</code> can be selected between 0 .. 255. 0= no event, 1..255 is the priority setting.
Ref-Status	<code>Reference</code> can be selected between 0 .. 255. 0= no event, 1..255 is the priority setting.

What information is available in an event?

The message consists of the following items;

- 1) A message string to show what has happened in text, for example: “INP_LOSS”, “REF_LOSS”, “INP_RETURN”.
- 2) A tag that also shows what happens, but with a predefined number: e.g. 1 (= loss of input), 2 (= loss of reference), 129(= 1+128 = return of input). For a list of these predefined tags see the table on the next page.
- 3) A priority that marks the importance of an event. This value is defined by the user and can have any value between 1 and 255, or 0 when disabled.
- 4) A slot number of the source of this event.

The Message String

The message string is defined in the card and is therefore fixed. It may be used in controlling software like Cortex to show the event.

The Tag

The tag is also defined in the card. The tag has a fixed meaning. When controlling or monitoring software should make decisions based on events, it is easier to use the tag instead of interpreting a string. The first implementation is the tag controlled switch in the GPI16.

In cases where the event marks a change to fault status (e.g. 1 for Loss of Input) the complement is marked by the tag increased by 128 (80_{hex}) (e.g. 129 (81_{hex}) for Return of Input).

Defining Tags

The tags defined for the card are:

Event Menu Item	Tag		Description
Announcements	0 or NA	0 or NA	Announcement of report and control values
Input1	01 _{hex} =INP1_LOSS	81 _{hex} =INP1_RETURN	input 1 lost or returned
Input2	12 _{hex} =INP2_LOSS	92 _{hex} = INP2_RETURN	input 2 lost or returned
CRC-Status1	03 _{hex} =CRC1_ERROR	83 _{hex} =CRC1_OK	CRC on input 1 error or OK
CRC-Status2	43 _{hex} =CRC2_ERROR	C3 _{hex} =CRC2_OK	CRC on input 2 error or OK
Reference	02 _{hex} =REF_LOSS	82 _{hex} =REF_RETURN	reference lost or returned

The Priority

The priority is a user-defined value. The higher the priority of the alarm, the higher this value. Setting the priority to Zero disables the announcement of this alarm. Alarms with priorities equal or higher than the Error Threshold setting of the RRC will cause the error LED on the Synapse rack front panel to light.


The Address

Together with the message string or the tag, the slot number or address of the card is relevant to be able to assign the event to a certain card.

8 LED Indication


Error LED	The error LED indicates an error if the internal logic of the GDB/HDB500/550/900/990 card is not configured correctly or has a hardware failure.
Input_1 LED	This LED indicated the presence of a valid SDI video signal on input 1.
Input_2 LED	This LED indicated the presence of a valid SDI video signal on input 2.
ANC Data_1 LED	Indicates the presence of embedded audio within input 1.
ANC Data_2 LED	Indicates the presence of embedded audio within input 2.
Reference LED	Indicated the presence of a valid reference signal on the selected reference input connector (ref-1 or ref-2).
Data Error_1 LED	This LED indicates a CRC error in input 1.
Data Error_2 LED	This LED indicates a CRC error in input 2.
Connection LED	This LED illuminates after the card has initialized. The LED lights for 0.5 seconds every time a connection is made to the card.
Error LED	The error LED indicates an error if the internal logic of the card is not configured correctly or has a hardware failure.
DM_Pres_A	This LED illuminates when a I/O board is present on position A
DM_Pres_B	This LED illuminates when a I/O board is present on position B
DM_Error_A	Indicates an error on the I/O board on position A
DM_Error_B	Indicates an error on the I/O board on position B

9 Block Schematic

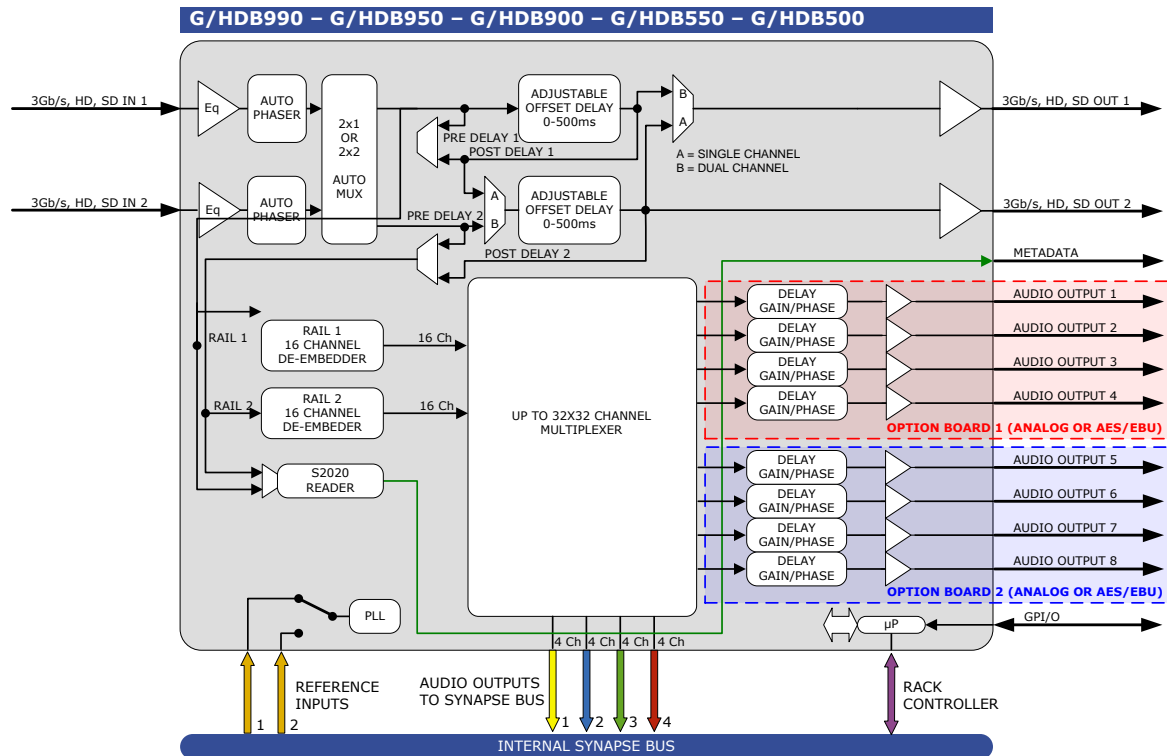


10 Connector Panels

The GDB-HDB500/550/900/950/990 can be used with the BPH18, the BHX18D or the bypass relay equivalents. The following table displays the pinout of these backpanels in combination with the card.

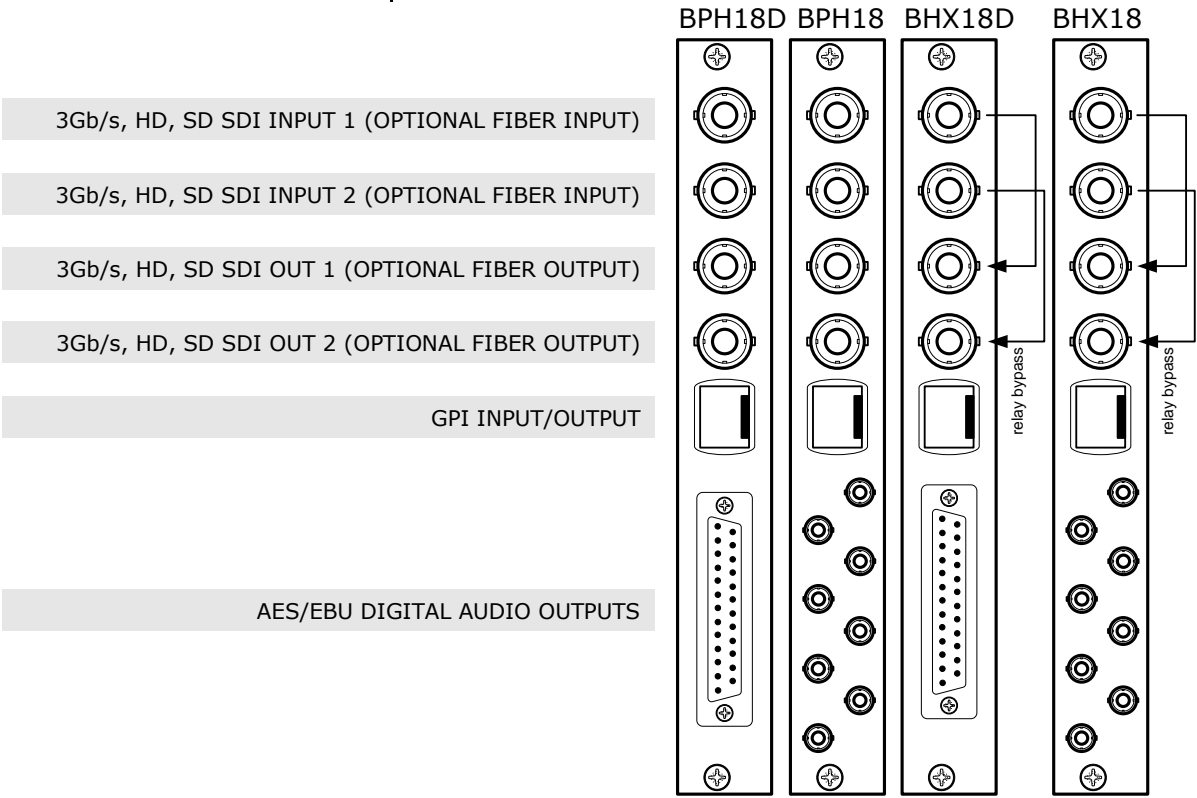


!Unused inputs and outputs must be terminated with the correct impedance!

GPI pinning

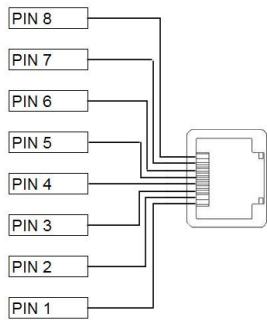

Pin	Function
1	Ground
2	GPI 1
3	GPI 2
4	GPI 3
5	GPI 4 / TXA(+)
6	GPI 5 / TXB(-)
7	GPI 6 / RXA(+)
8	GPI 7 / RXB(-)

D-sub pinning

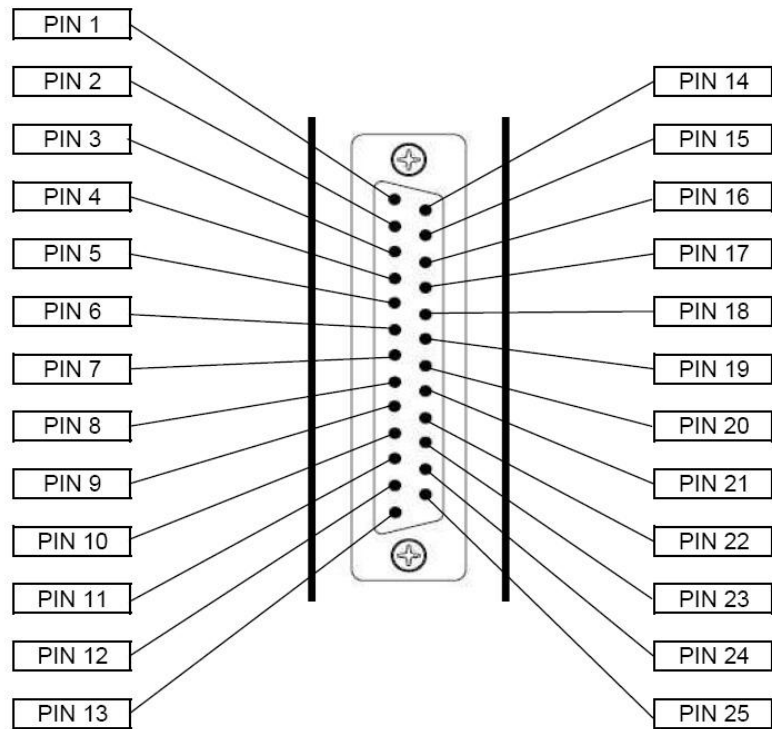

Pin	G/HDB500	G/HDB550	G/HDB900	G/HDB950	G/HDB990
1	A1neg OUT	A1neg OUT	D1neg OUT	D1neg OUT	D1neg OUT
2	A1pos OUT	A1pos OUT	D1pos OUT	D1pos OUT	D1pos OUT
3	GND	GND	GND	GND	GND
4	A3neg OUT	A3neg OUT	D3neg OUT	D3neg OUT	D3neg OUT
5	A3pos OUT	A3pos OUT	D3pos OUT	D3pos OUT	D3pos OUT
6	GND	GND	GND	GND	GND
7	Not used	A5neg OUT	Not used	A1neg OUT	D5neg OUT
8	Not used	A5pos OUT	Not used	A1pos OUT	D5pos OUT
9	GND	GND	GND	GND	GND
10	Not used	A7neg OUT	Not used	A3neg OUT	D7neg OUT
11	Not used	A7pos OUT	Not used	A3pos OUT	D7pos OUT
12	GND	GND	GND	GND	GND
13	Not used	Not used	Not used	Not used	Not used
14	GND	GND	GND	GND	GND
15	A2neg OUT	A2neg OUT	D2neg OUT	D2neg OUT	D2neg OUT
16	A2pos OUT	A2pos OUT	D2pos OUT	D2pos OUT	D2pos OUT
17	GND	GND	GND	GND	GND
18	A4neg OUT	A4neg OUT	D4neg OUT	D4neg OUT	D4neg OUT
19	A4pos OUT	A4pos OUT	D4pos OUT	D4pos OUT	D4pos OUT
20	GND	GND	GND	GND	GND
21	Not used	A6neg OUT	Not used	A2neg OUT	D6neg OUT
22	Not used	A6pos OUT	Not used	A2pos OUT	D6pos OUT
23	GND	GND	GND	GND	GND
24	Not used	A8neg OUT	Not used	A4neg OUT	D8neg OUT
25	Not used	A8pos OUT	Not used	A4pos OUT	D8pos OUT



This product contains open-source software

This product contains open-source software licensed under the GNU Public License (GPL). A copy of the GNU Public License is included below. Under this license you are eligible to receive a copy of the source code of this software including any changes.

Axon Digital Design shall provide the source code on request either through physical distribution or electronic communication. For physical distribution you may be charged a fee that covers distribution costs. This offer is valid up to three years after date of purchase. Please direct your request to the support department of Axon Digital Design.

Axon Digital Design supports open-source software by participating in the development of open-source projects or submitting improvements to these projects. For more information see <http://opensource.axon.tv/>

GNU Public License version 2

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,



- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.



NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.